
SOLID F140

Operator's Manual

Edition 1.0



Table of Contents

| Chapter | Page |
|---|-----------|
| 1. Introduction | 7 |
| 1.1. General Description | 7 |
| 1.2. Conventions | 9 |
| 1.3. CE – Conformity | 10 |
| 1.4. General Safety Instructions | 11 |
| 2. Installation | 13 |
| 2.1. Check List | 13 |
| 2.2. Printer Installation (Environment and Power Standards) | 14 |
| 2.3. Printer Components | 16 |
| 3. Handling of Consumables | 19 |
| 3.1. Loading Paper | 19 |
| 3.2. Replacing the Toner Cartridge | 27 |
| 3.3. Replacing the Waste Toner Bottle | 31 |
| 4. Operation and Menu Structure | 35 |
| 4.1. Attaching the Printer to a Computer | 35 |
| 4.2. Printer Power on | 35 |
| 4.3. Control Panel View | 36 |
| 4.4. Function of the Control Panel Elements | 37 |
| 4.5. Configuration via the Control Panel | 40 |
| 4.6. Menu Structure | 42 |
| 4.7. Syntax of Diagrams | 46 |

4 Table of Contents

| Chapter | Page |
|---|-----------|
| 5. Panel Functions | 47 |
| 5.1. Display Language Selection | 48 |
| 5.2. Page Length Adjustment | 49 |
| 5.3. Paper Width Adjusting (Format Width) | 51 |
| 5.4. Printing the Status Sheet | 52 |
| 5.5. Printing the Menu Page | 54 |
| 5.6. Selecting the Number of Printpages per Page Format (Two-Up Mode) | 55 |
| 5.7. Generating Test Prints (Sliding Pattern) | 57 |
| 5.8. Printing the Font List | 59 |
| 5.9. Choosing Print Resolution | 60 |
| 5.10. Configuration of Text Margins | 62 |
| 5.11. Hexdump Mode Activation | 63 |
| 5.12. Normal Print Mode Activation (incl. FORM FEED) | 64 |
| 5.13. Clearing the Input Buffer (Cancel Job) | 65 |
| 5.14. Print Direction Selection | 66 |
| 5.15. Data Interface Configuration | 67 |
| 5.16. Emulation Selection | 68 |
| 5.17. Transparent Code Adjustment | 70 |
| 5.18. Selection of Memory Distribution (Input Buffer) | 71 |
| 5.19. Setting to Factory Default | 72 |
| 5.20. Font Selection | 73 |
| 5.21. Text Orientation Selection | 76 |
| 5.22. Symbol Code Selection | 77 |
| 5.23. Image Shifting to the X-Direction | 78 |
| 5.24. Image Shifting to the Y-Direction | 80 |
| 5.24. Image Shifting to the Y-Direction | 80 |
| 5.25. Lines per Inch Setting (Line Spacing) | 82 |
| 5.26. Number of Characters per Inch Setting (Character Spacing) | 83 |
| 5.27. Print Density Setting | 84 |
| 5.28. Configuration of Network Parameters (IP Address, e.g.) | 85 |

| Chapter | Page |
|---|------------|
| 6. Printer Cleaning | 89 |
| 6.1. Cleaning the Elements behind the Front Cover | 90 |
| 6.2. Cleaning the Transport Unit | 94 |
| 6.3. Cleaning the Paper Feed Unit | 97 |
| 6.4. Cleaning the Paper Near End Sensor | 98 |
| 6.5. Cleaning the Power Stacker | 99 |
| 7. Operator Maintenance | 101 |
| 7.1. Charger Cleaning | 101 |
| 7.1.1. Main Charger Cleaning | 102 |
| 7.1.2. Pre-Charger Cleaning | 106 |
| 7.1.3. Transfer-/Separator Charger Cleaning | 108 |
| 7.2. Developer Unit Cleaning | 111 |
| 7.3. Main Charger Replacing | 116 |
| 7.4. Pre-Charger Replacing | 117 |
| 7.5. Transfer-/Separator Charger Replacing | 119 |
| 7.6. Photoreceptor Drum Exchange | 121 |
| 8. Troubleshooting | 129 |
| 8.1. Reduced Print Quality | 130 |
| 8.2. Error Messages | 131 |
| 8.2.1. Further Error Messages and Error Codes | 134 |
| 8.3. Paper Jam | 137 |
| 8.3.1. Paper Jam inside the Tractor | 137 |
| 8.3.2. Paper Jam inside the Print System | 138 |
| 8.3.3. Paper Jam within the Power Stacker | 143 |
| 8.4. Print Repetition after an Error | 144 |

6 Table of Contents

| Chapter | Page |
|---|------------|
| 9. Measures for Transport and Shipping (Repacking) | 145 |
| 10. Specifications | 147 |
| 11. Index | 151 |

1. Introduction

1.1. General Description

The print system SOLID F140 works on an electrophotographical base employing an LED array as exposure unit. The maximum resolution of 600 dots per inch is corresponding to about 24 pixels per mm.

The print speed is up to 140 pages per minute in the Two-Up mode .

Exclusively continuous media with sprocket holes can be used for the tractor guiding. The maximum material width is 18 inches, the printable width is 17 inches. This enables you to print two A4 portrait pages side by side (Two-Up). A stacker is included in the standard device.

The non-contact Xenon flash fusing system in combination with the straight paper flow enables you to use the most different paper types and label materials with a weight from 60 to 204 g/m². Even demanding media like plastic, PVC etc. can be used.

Consequently there is a multitude of scopes for this print system. It is suitable for high-speed printing with excellent print quality using different types of materials.

The high functionality of the Microplex controller specially qualifies the SOLID F140 also for form printing.

The printer is capable of using most of the page description languages used in the industrial field and also the business standards known in connection with laser printers can be used.

The capabilities featured include the Microplex page description language IDOL. Using this language, complex tasks such as the creation of forms can be carried out by simple software commands (see separate IDOL manual).

Data can be sent from almost any software platform, because printer drivers are already available for this.

The Microplex printer controller has its integrated website, this allows a printer configuration via Ethernet. See [Networking Features of Microplex Printers](#) for more information.

Consequently there is a multitude of scopes for this print system. It is suitable for high-speed printing with excellent print quality using different types of materials.

Printing Basics

The Microplex printer controller enables the connection of this print system to EDP systems whereby several interfaces, emulations and fonts are available.

The digital information (e.g. a text file) is transferred from the computer into the printer memory. The printer's electronic component (the controller) combined with the page description language, defines the letters, numbers, graphics, etc. into bit patterns and posts them into the controller's frame store.

In this way, a "pattern" of the future print page (generated by dots) is created.

The electronically controlled LED (Light Emitting Diode Array) plots the dot pattern in rows onto the light-sensitive surface of a rotating pre-charged drum. Toner is caused to adhere to the electrostatic latent image formed on the drum surface. This image consisting of toner particles is electrically transferred onto the paper, which is guided past the drum.

When transported further, the toner particles, which are affected by the Xenon flash fusing, are combined resistantly with the paper. The drum is discharged and cleaned.

1.2. Conventions

The following conventions should help you to find information and to understand instructions more easily:



This symbol refers to a possible source of danger. Disregarding the information identified by this symbol could result in injuries, a reduction of printer functionality, or damage to the printer or other objects.



This symbol indicates important hints and suggestions on using the printer. Disregarding the hints might cause problems with the printer or within the environments.




This symbol shows a control panel key. Such symbols will be used in this manual whenever keys have to be pressed in order to activate certain functions.

[blue colored text](#)

Link to another chapter or a different document. By clicking the blue colored text you'll enter the concerning chapter or document.

[Menu Level 1]

This symbol represents messages shown in the display (panel).

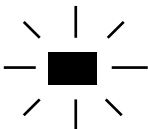


This symbol is used to show a shining LED (light emitting diode). The SOLID F140 printer panel is provided with several LEDs. The real shape of the LEDs differs from the shape of this symbol (compare figure in section 4.3).




This symbol will be used in this manual to show a non-shining LED.

1.3. CE – Conformity




Verification of Compliance


The products

EUT : Laser Printer
Trade Name :  , KPOWER, KP, winjet, MICROPLEX
Model No. : KP3868
New Serial Model : ML**W# ("****" =0000~5500)**
("#" =A~Z or blank), SOLID F140
 which produced by
KPOWERSCIENCE CO., LTD.
No. 4, Lane 185, Huan-Ho St., Hsi-Chih Dist., New Taipei City 221, Taiwan

Has been tested by Electronics Testing Center, Taiwan ETC
 And was found to comply with the EMC requirements of Directive 2004/108/EC on the basis of

EN 55022:2010+AC:2011 (Class A) EN 55024:2010
EN 61000-3-2:2006/A2:2009
EN 61000-3-3:2013



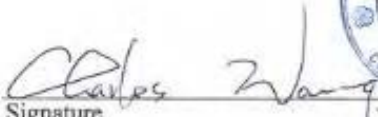

 Signature
 Charles Wang
 Section Manager of EMC Testing Department II
 Electronics Testing Center, Taiwan

Report Number : 14-12-RBP-066
Date of Issue: Dec. 16, 2014

Note: 1. The results of the Test Report relate only to the items tested.
 2. The Test Report shall not be reproduced except in full, without the written approval of ETC.
 3. Together with the applicant's own documented production control, the applicant (or his European authorized representative) could draw up an EC Declaration of Conformity and affix the CE marking.
 4. EC Declaration of Conformity is the responsibility of the manufacturer/ importer.

| | |
|---|--|
| ELECTRONICS TESTING CENTER, TAIWAN NO. 34, LIN 5, DINGFU VIL., LINKOU DIST., NEW TAIPEI CITY, TAIWAN, 24442, R.O.C. | TEL: (02)26023052 INT: +886-2-26023052 FAX: (02)26010910 INT: +886-2-26010910 |
|---|--|



1.4. General Safety Instructions



This device produces, employs and possibly radiates high frequency energy. Because of this, incorrect installation can disturb radio communications.

This Microplex product and its consumables are designed and tested according to strict safety standards.

Heeding the following instructions ensures secure operation:



- Make sure that your electricity source is grounded adequately.

- Install the device on solid and level ground.

- Only trained staff is authorized to transport the equipment.

- Only use consumables which are specially developed for this device.



- Unsuitable consumables may reduce printer output quality or cause damages.

- No liquids should get on or into the device.

- Do not remove any cover or safety device fastened by screws.



- Do not bridge a safety device.
- Do not push anything into the ventilation apertures.
- Never perform installations, cleanings or maintenance work that is not described in this manual. Such work should only be done by Microplex authorized service personnel.
- To avoid damage, the devices must be switched off (i.e. cut off from the power supply) before the user begins connecting the interface line.



In case of emergency, in order to disconnect the printer from the main power, please note the following:

- For connected printers with plugs, an easily accessible power-outlet should be installed near the printer.
- For permanently connected printers, an easily accessible emergency power-off switch should be installed close to the printer.
- Please do not conceal any disconnect devices with the printer or other objects.



- Please follow all the information and hints directly attached to the device and/or described in this manual.
- To ensure optimum printer performance, only use Microplex consumables.

2. Installation

2.1. Check List

First, place the printer and the accessories onto a level surface until the definitive location is chosen.

Please make sure that all items are included and that there are no defects. Immediately inform your supplier of any damage.

Open the cardboard box carefully and check the contents:

1. Microplex Printer SOLID F140
2. CD containing:
 - Operator's Manual SOLID F140
 - Print drivers
 - IDOL Programming Manual
3. Developer Unit
4. Developer (powder)
5. Toner
6. Photoreceptor Drum
7. Cleaning Unit
8. Stacker



The printer's first installation has to be done by a trained service engineer.



Please retain the original packing materials in case the printer has to be transported in the future.
Use the original packing materials and adhesive fasteners to avoid damage to the internal components.
(See chapter 9 Measures for Transport and Shipping (Repacking)).

2.2. Printer Installation (Environment and Power Standards)

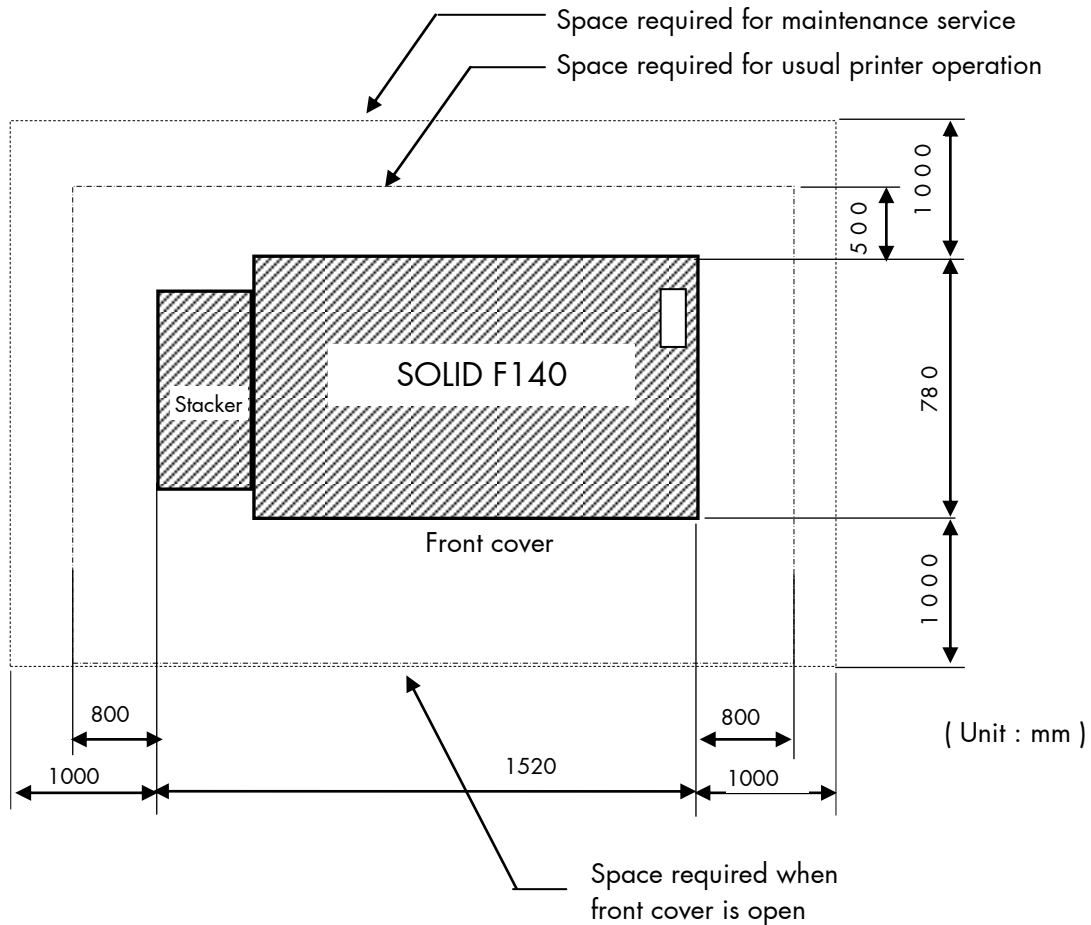


Fig. 2.2.a SOLID F140: Required space (plan view)

- The chosen location should be well ventilated.
- Damaging environmental factors such as metal vapors, oil mist, corroding lixivium or the like must not come in contact with the printer.
- Position the printer on solid and level ground.
- Do not expose the printer to shocks or vibrations.
- The printer should not be located near volatile or combustible materials (e.g. a curtain).



The printer's first installation has to be done by a trained service engineer.

- Avoid locating the printer close to an air current (e.g. ventilators).
- The printer should not be exposed to direct sunlight.
- Do not touch the drum surface because the material is easy to damage.
- Do not expose the printer to abrupt temperature changes.
- In order to run the printer reliably, please maintain the following environmental conditions:

Temperature: +15°C to +30°C (59°F to 86°F) operating
 -10°C to +35°C (14°F to 95°F) non-operating
 Relative humidity: 30% to 80% operating
 10% to 80% non-operating



Power standards:

- Please connect the power plug to
 230 V AC, 50 Hz (Europe, United Kingdom e.g.).
- The max. effective power input is appr. 4.0 kVA.
- The voltage support must not be impaired by interference.
- The printer is provided with a flexible 3x2.5 mm² connection cable including a CEE plug 3x32. The corresponding CEE socket has to be provided with a $\geq 25A$ fuse.
- If using an equivalent fixed connection ensure the grounding is effected.
- Use the printer only within the allowable fluctuation range $\pm 10\%$ of the power voltage.

Conditional connection for the SOLID F140:


The maximum permissible system impedance Z_{\max} is appr. 0.02 Ohm. The user of this device has to determine in consultation with the supply authority, if necessary, that the equipment is connected only to a supply of that impedance or less!



To avoid damage, the devices must be switched off (i.e. cut off from the power supply) before the user begins connecting the interface line.


2.3. Printer Components

External Views:

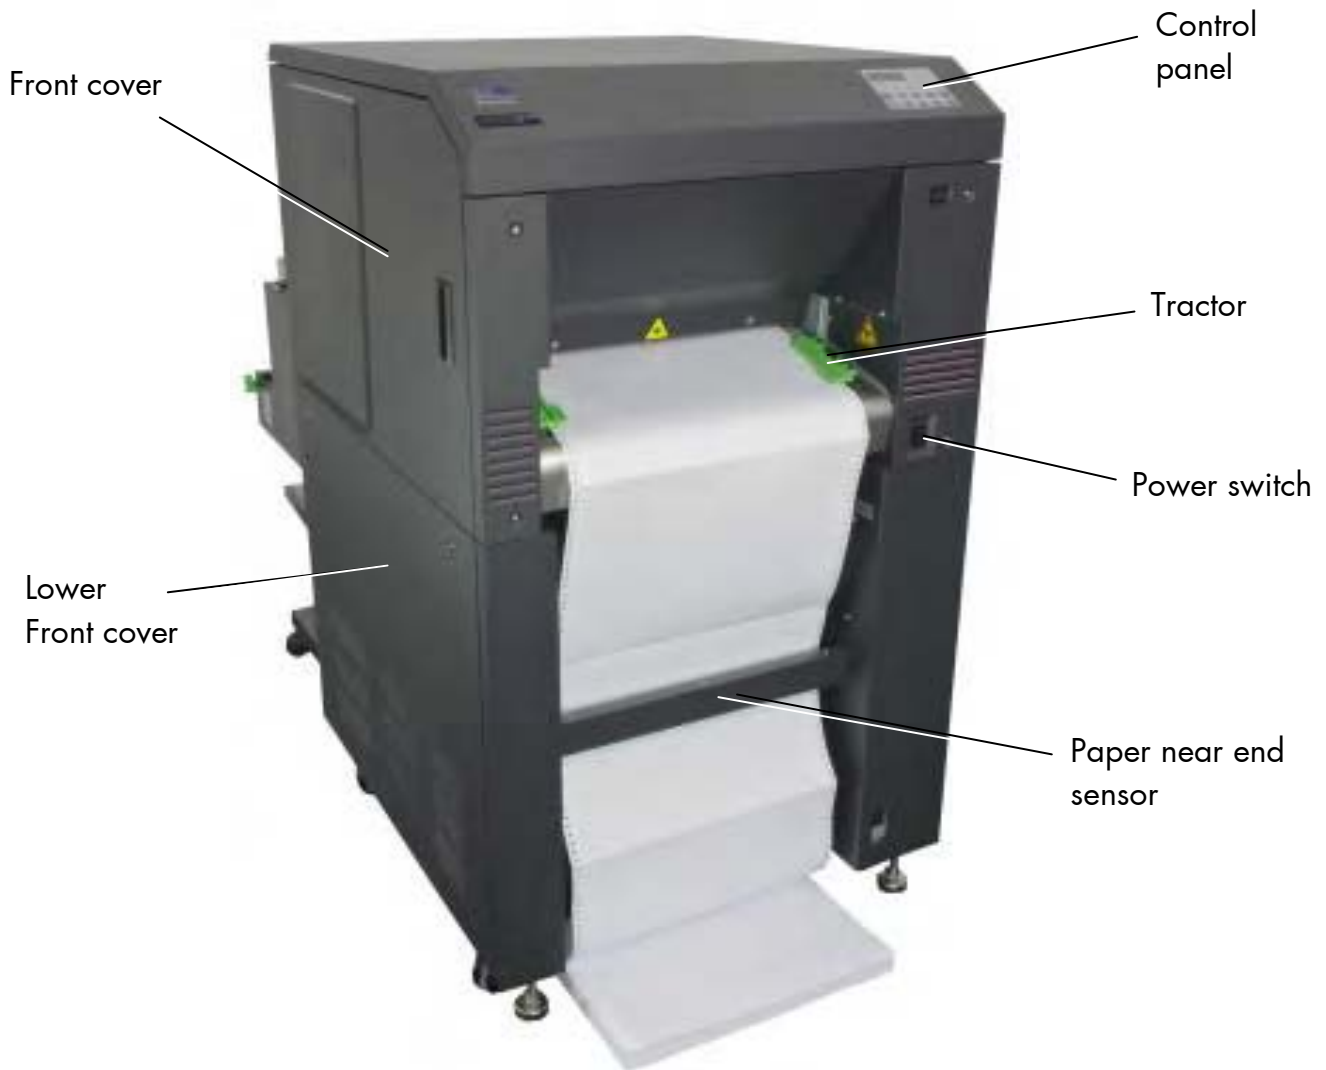




Interfaces (Detail View):

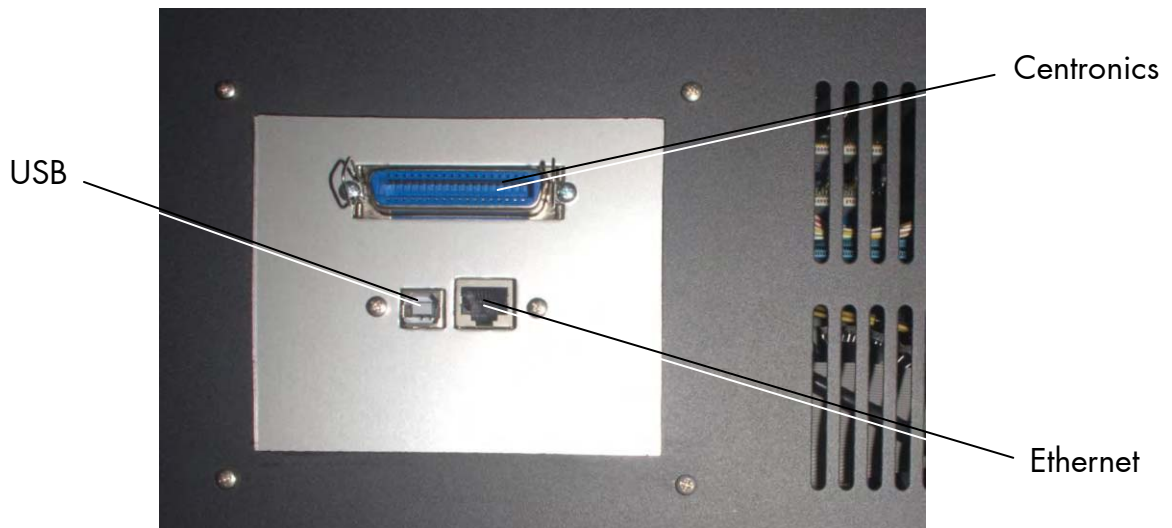

Printer interior view:

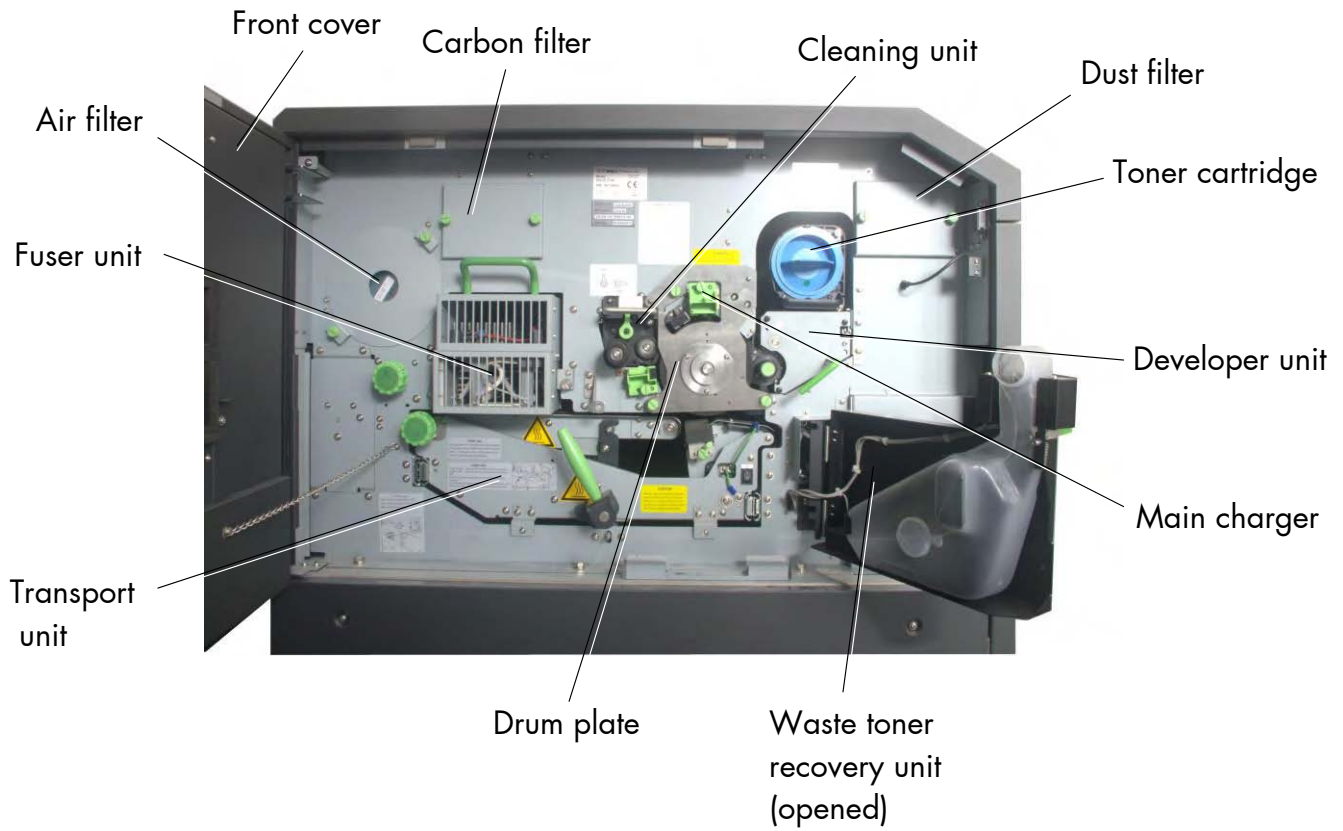

3. Handling of Consumables

3.1. Loading Paper



The printer processes continuous paper in lengths from 7 to 24 inches and width from 6 to 18 inches (including the perforated margins, 17 inches printable).

You can check the printer configuration (inclusive the settings regarding paper length etc.) by printing a status sheet (see section 5.4).



If a large quantity of paper with a paper width smaller than 18 inch has been processed, the printer has to be cleaned first before you start to process paper with a larger paper width.

See chapter 6 Printer Cleaning (especially section 6.2 Cleaning the Transport Unit) and chapter 7 Operator Maintenance (especially section 7.1 Charger Cleaning).

1. Turn the printer OFF LINE.

Make sure the left tractor is in the left position:

Left tractor




2. Please unlock the left tractor. For that you have to turn the lever (tractor lock lever) of the left tractor into the vertical position.

Lock lever
of the left
tractor




3. Move the left tractor to the left position.
4. Lock the left tractor. For that you have to turn the tractor lock lever downwards.

Lock lever
of the left
tractor

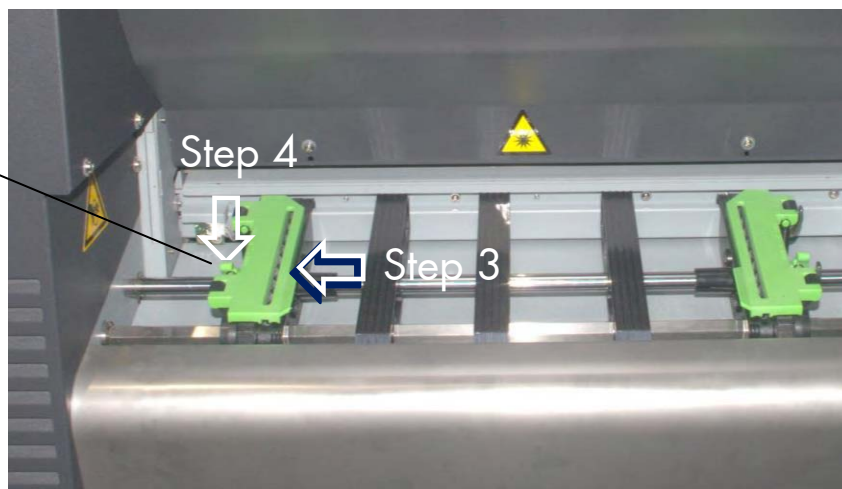


5. Unlock the right tractor and move it to the right position.

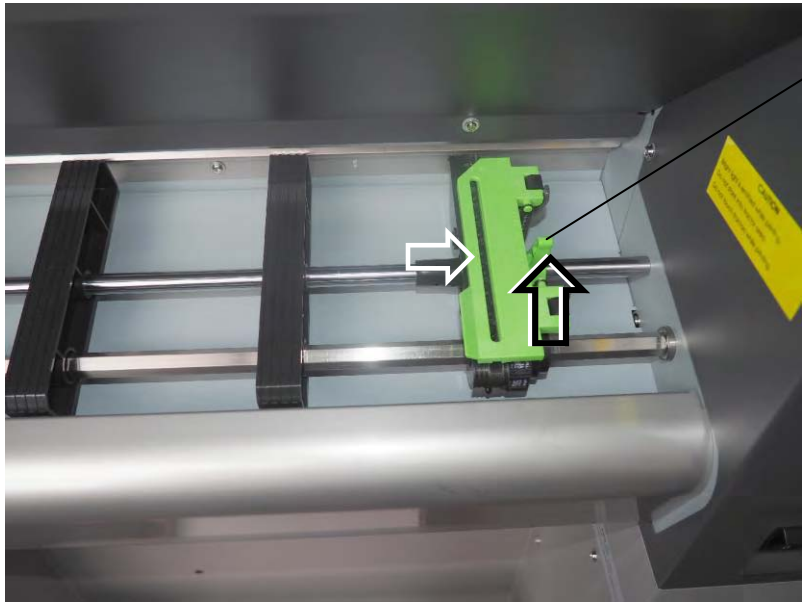

Lock lever of the right tractor

6. Open the two tractor cover plates by turning them into the upright position.

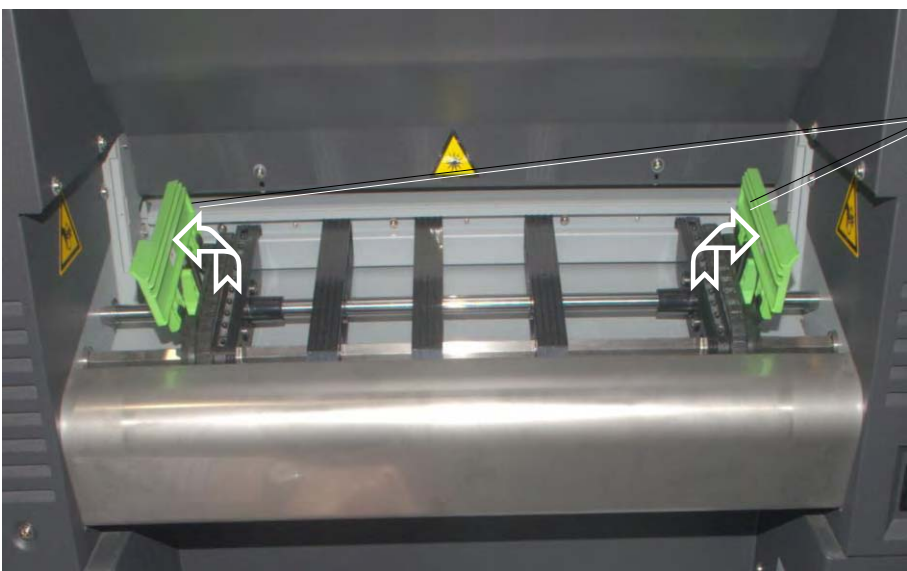

Tractor cover plates

7. Place the box containing the fanfold paper below the tractor unit as shown below.



Mark for the left
paper margin

8. Pass the fanfold paper through the sensor guide (Paper Near End Sensor PNES).



Guide with paper sensor



To avoid paper jams the first folded edge of the fanfold paper (Perforation) has to point away from the printer. (If need be, please tear off the first page of your fanfold paper to allow the alignment shown in the following figure.)

In addition do not stretch the paper excessively and do not allow any slack to avoid incorrect filing.

By this you can secure that the paper will be positioned right in the stacker.

Preview: Fanfold paper loaded in the right way




9. Place the paper on the tractor pins on the left side. The paper perforation should be aligned over 4 or 5 tractor pins.



10. Close the left tractor cover plate.
11. Spread out the tractor so that the sprocket holes on the right side of the continuous paper can be placed easily onto the tractor pins.

Please note: exactly the same number of tractor pins has to be chosen on this tractor side (compare step 9).

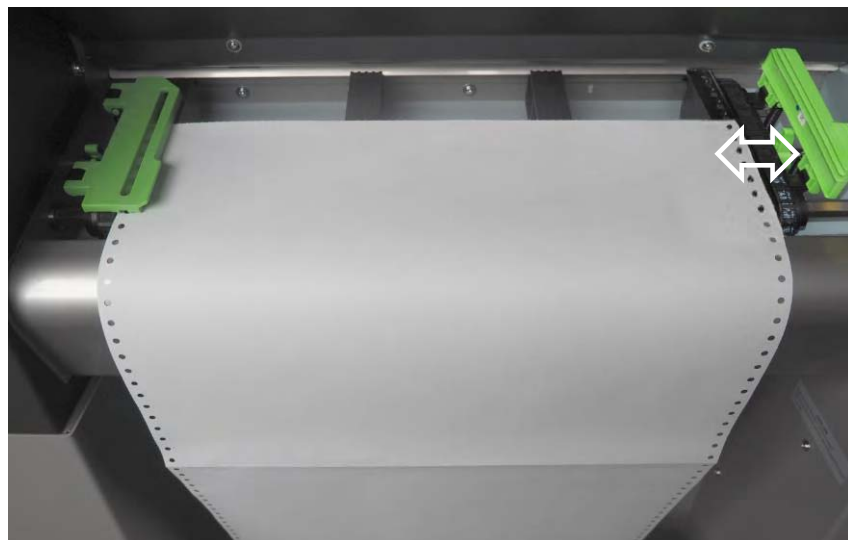

The paper sensor in the middle of the tractor has to be covered by the paper. On the other hand the paper must not reach into the printer too far.

12. Close the right tractor cover plate and tighten the paper **gently** with the right tractor.



To avoid paper jams the paper must not be inserted too loose or too tight.

13. Lock the right tractor by using the lock lever.



Lock lever
of the right
tractor

Tractor cover
plate

14. Turn the printer ON LINE. The newly aligned paper will be driven to the start position automatically.

15. If necessary adjust the printer to the new page length (see section 5.2).

3.2. Replacing the Toner Cartridge


Please replace the toner cartridge, when the message [TONER EMPTY!] is displayed.

With one toner filling approximately 20,000 pages A4 with a print density of 5 % can be printed (compare chapter 10 Specifications).




Please wear vinyl gloves to avoid dirty hands when replacing the cartridge.

1. Open the front cover of the printer.

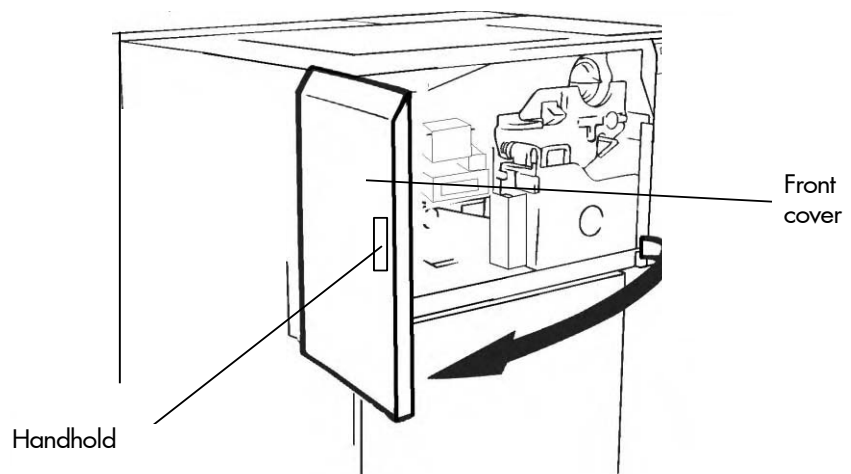

2. Rotate the used toner cartridge 180° counterclockwise until it stops. Pull out the cartridge.

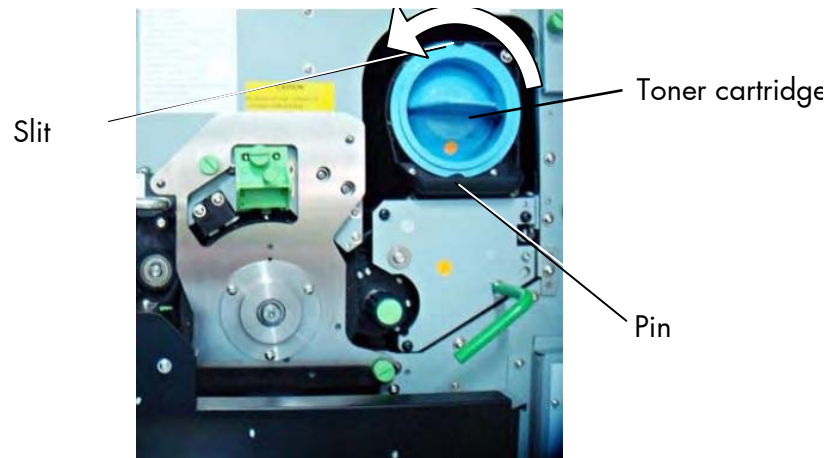


3. Take the new toner cartridge out of the packing. Use the vinyl bag to pack the old cartridge.




On the occasion of every toner cartridge replacing the necessity of cleaning the developer unit has to be checked. Cleaning the developer unit has to be done in due time to avoid reduced print quality (see section 7.2).


4. Shake the new cartridge gently by performing horizontal movements to distribute the toner.

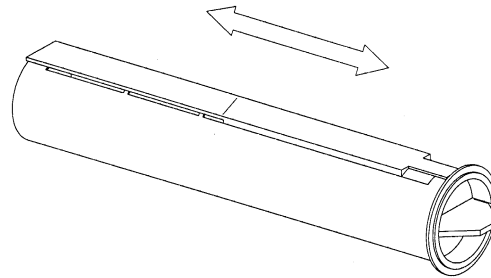

5. Put the end of the new cartridge into the SOLID F140 toner hopper with the adhesive tape facing up, and slowly strip off the tape from the front to the back. Slide the cartridge gently into the device in one operation.

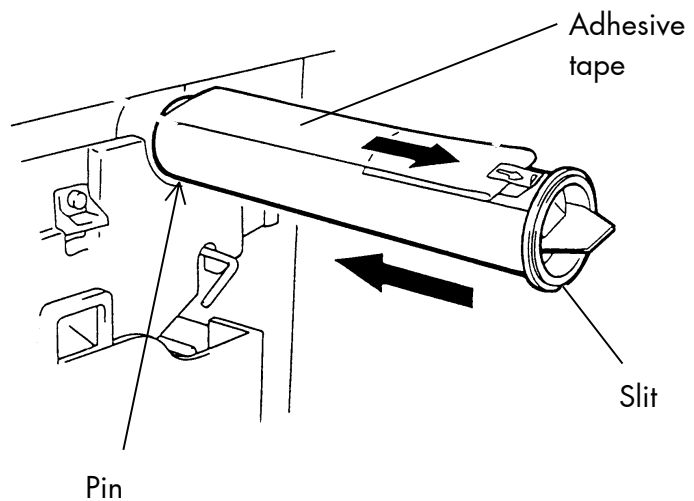

6. Insert the cartridge deeply into the toner hopper until it stops. For that you have to align the toner cartridge slit with the developing unit pin. Then slowly turn the cartridge 180° clockwise.

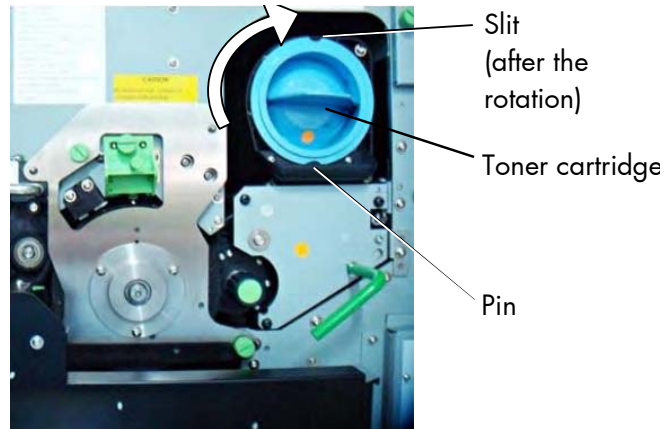

7. Close the printer's front cover.

The announcement [TONER EMPTY!] will be extinguished.




The toner is easily combustible and should never come in contact with fire. Disposal will be carried out by your service engineer. Until disposal please store the cartridge in a vinyl bag in a closed cardboard box.

3.3. Replacing the Waste Toner Bottle




Replace the waste toner bottle when the announcement [TONER WASTE!] occurs. On average, the bottle will be filled after 100,000 A4 pages have been printed.

1. Open the front cover of the printer.

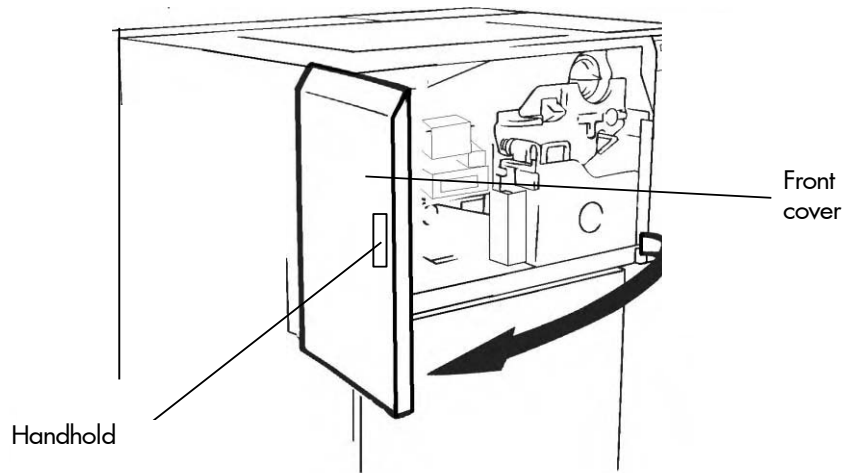


2. Press down the open lever of the waste toner recovery unit and open the unit.

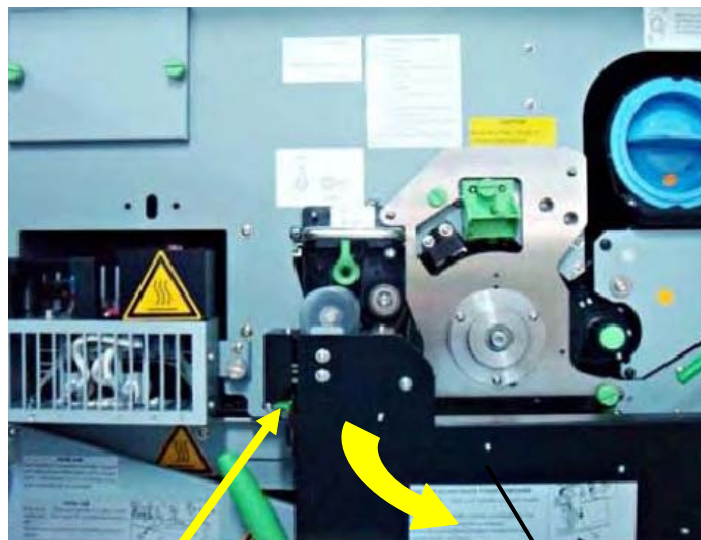


Open lever (green)

Waste toner recovery unit

3. Take off the cap outside the waste toner recovery unit and close the bottle.

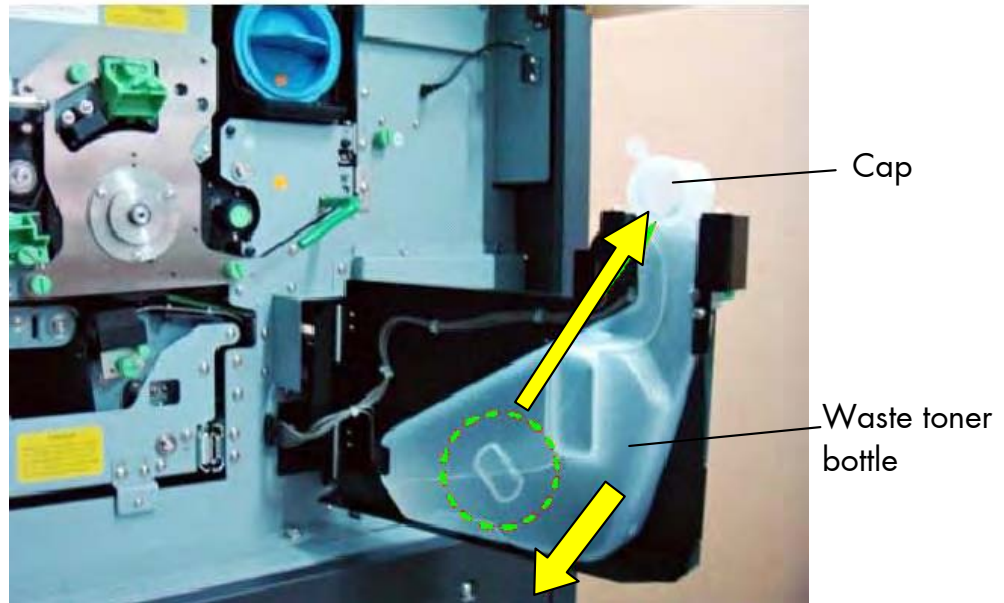

4. Take out the waste toner bottle completely.

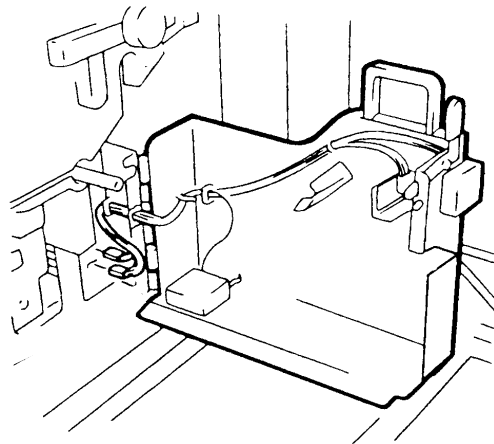

5. Insert the new bottle into the waste toner recovery unit.



Close the waste toner recovery unit. Make sure the bars click into place.

6. Close the printer's front cover.
The announcement [TONER WASTE!] will be extinguished.



The waste toner is easily combustible and should never come in contact with fire. Disposal will be carried out by your service engineer. Until disposal please store the waste toner bottle in a vinyl bag in a closed cardboard box.

4. Operation and Menu Structure

4.1. Attaching the Printer to a Computer

1. Make sure the printer, computer, and any other attached devices are turned off and unplugged.
2. Use a proper interface line to connect the printer to the computer or to attach the printer to the network.
The printer SOLID F140 is provided with several interfaces; see chapter 10 Specifications for more information.


4.2. Printer Power on

The power switch is located at the right side of the printer (see section 2.3 Printer Components). As soon as the printer's warm up phase is finished the print system SOLID F140 goes into the ON LINE mode. The Online LED and the Ready LED shine and the name of the printer is displayed.

4.3. Control Panel View

The control panel offers you:

- information about the actual state of the device (panel and LEDs).
- direct command input using the keyboard.

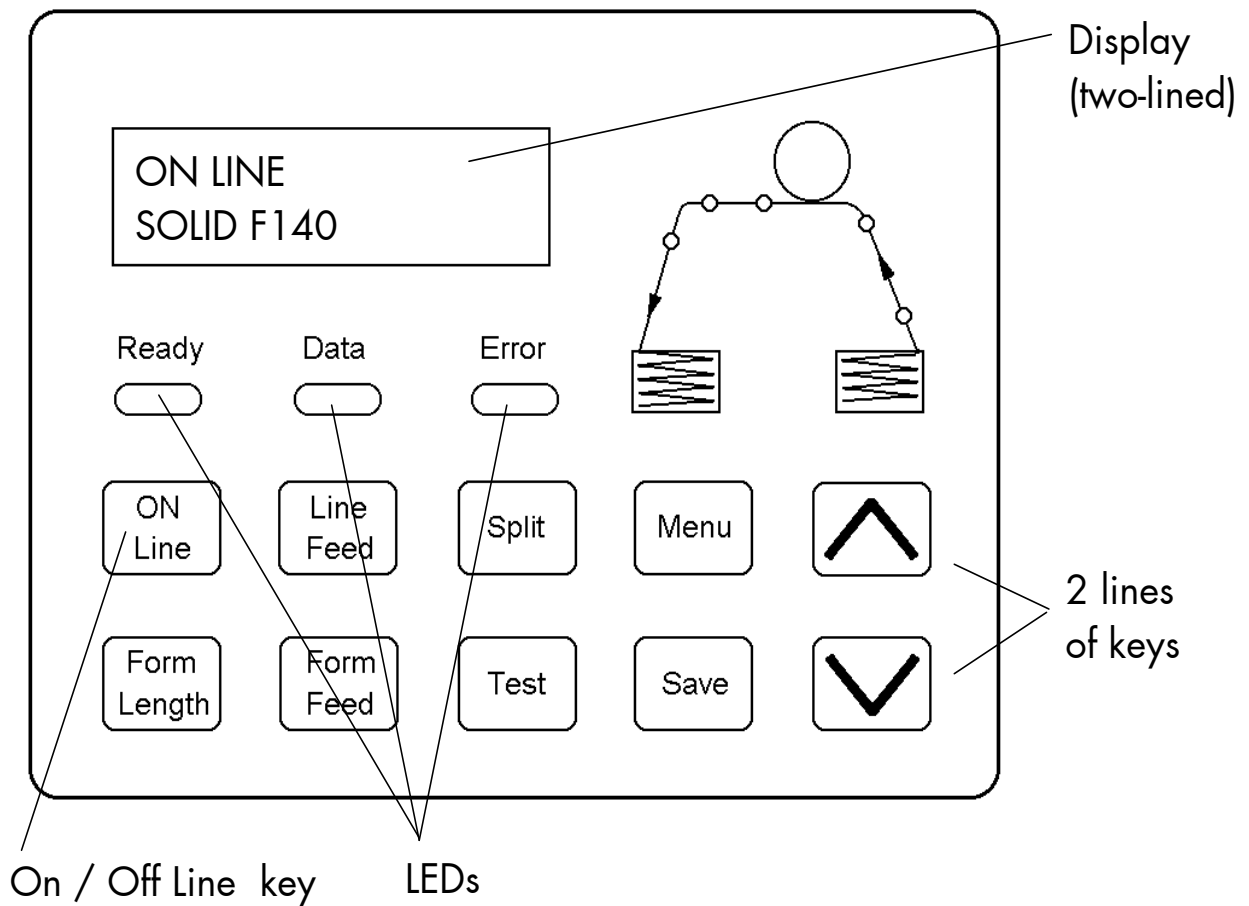


4.4. Function of the Control Panel Elements

Display

The display (panel; 2 x 16 character LCD) serves to show the printer's messages.

LEDs


Meaning of the LED Announcements:
The printer control panel contains the following LEDs (Light Emitting Diodes):

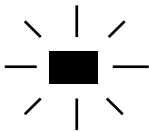

The printer is ready to operate, initializing has been completed, the photoreceptor drum is warmed up etc.




The phase of initializing is not yet completed.

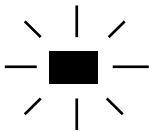

The printer receives printable data.



There are no printable data in the input buffer.

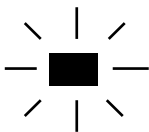

An error occurred in the printer. The printer is OFF LINE.



No error occurring.

Control Panel Keys



This symbol shows the ON LINE key. This key is used to turn the printer ON LINE or OFF LINE.

The other control panel keys are only active in the OFF LINE mode.



The current form length is announced. The form lengths from 7 to 24 inches can be selected in 1/6 inch steps.



The cutting device can only cut paper along the perforation, so the set form length has to correspond with the current paper size. Wrong settings lead to paper jams.



Paper will be transported 1/12 inch forward.



After loading new paper the paper will be driven to the start position. Apart from that activating the FORM FEED key in the OFF LINE mode will move the paper one form length ahead.



The last print job will be cut at its end and the paper will be moved to the park position.



A status sheet will be printed (see section 5.4 Printing the Status Sheet and section 5.7 Generating Test Prints, too).



These keys are used for working within the different levels of the menu structure.

This structure and the panel functions are described in the following chapters.

4.5. Configuration via the Control Panel

You can use the control panel to change the printer configuration and customize your printer to meet your specific needs.

In addition printer configuration via Ethernet is possible. The Microplex printer controller offers an integrated website, for more information see [Networking Features of Microplex Printers](#).

Chapter 5 (Panel Functions) describes how to reach the particular printer functions via the control panel.

T e m p o r a r y changes in printer configuration are effective only as long as the printer stays turned on. To select such changes temporarily, the user must terminate the change of function by pressing the **SAVE** key one single time.

P e r m a n e n t changes in printer configuration are active each time the printer is turned on again. To select such changes permanently, the user must terminate the change of function by pressing the **SAVE** key **two times**.

An output of the current printer values can be generated using the "Status Sheet Printing" panel function (see section 5.4).

Please note:

- User default settings remain in effect until you save new settings or restore the factory defaults.
- Settings you choose from your software application or printer driver can also change or override the user default settings you select from the touch panel.

Switching the Printer OFF LINE

After the printer was turned on (and as soon as the warm up phase is finished) the printer goes into the ON LINE – Mode.

[SOLID F140] The display of the control panel shows the name of the printer.




This symbol shows the ON/OFF LINE key. If the printer is turned OFF LINE with this key you get automatically into the first menu level.

[Menu Level 1] Now this message is shown by the display of the control panel.

In the interest of simplicity, in the following chapters only the most important display messages are shown in the Panel display column.

4.6. Menu Structure

Access to the menu structure is possible as soon as the printer is turned OFF LINE.
 The SOLID F140 menu structure is arranged in different levels:

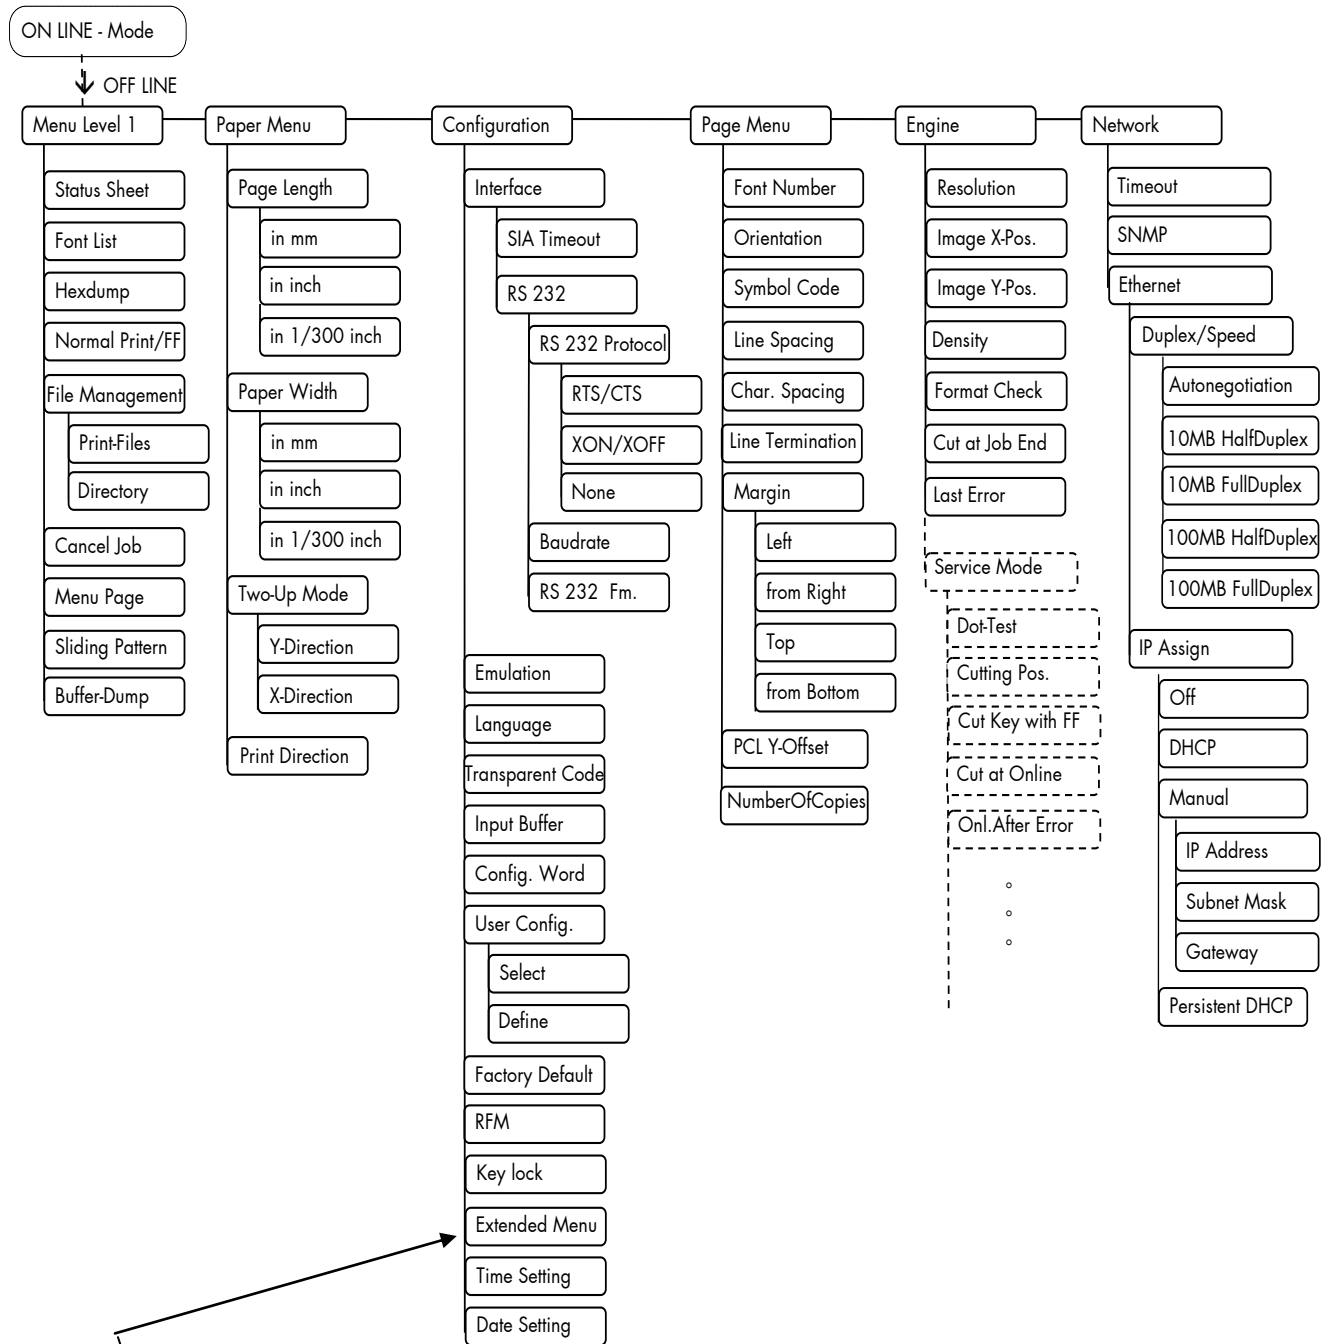

This panel function allows the user to choose a **reduced menu** instead of the extended menu shown above.

Selecting positions in the menu structure:



This symbol shows the ON/OFF LINE key. You get automatically into the first menu level, if the printer is turned OFF LINE with this key.



These symbols show the ARROW keys. By pressing the UP arrow or the DOWN arrow you can move within the menu levels.



Press and hold the UP key to scroll forward or the DOWN key to scroll backward (to change numerical values, for example).

["Menu Level"]

Each menu item/sub-item within a menu level is shown in the display of the control panel.



The SAVE key has two main functions. It gives the user access to a particular menu and, once in the menu, it allows the user to select a particular function.

["Function"]

Functions / Changing of function values:



Within one function the value can be changed by pressing the ARROW keys.



In case of a multi-digit function value the value of the currently chosen digit will be changed.



In case of a multi-digit function value pressing the SAVE key switches to the next position of the function value.



Pressing the MENU key switches to the previous digit of the function value.

Please note: If you press the MENU key although the absolute left digit of the function value is still arrived, the changing procedure will be cancelled and this moves you to the next menu level above.

If you press the SAVE key although the absolute right digit (digit 1) of the function value is still arrived, the currently displayed function value is stored.



Pressing the SAVE key the currently displayed function value is confirmed respectively the displayed function is activated. The changes are stored temporary. (This means, the changes are saved only until the next printer power off).

[Save as Setup?]

After this you have to decide, if you want to save the changes permanent (Save as setup).



To select such changes permanently, the user must press the SAVE key one more time. These permanent changes in printer configuration are active each time the printer is turned on again.



If the MENU key is pressed instead, the changes are only stored temporary (not saved as setup). (This key takes the user to the respective previous menu level).

Return to the menu level above:



Pressing the MENU key takes the user back to the respective menu level above.

Return to the ON LINE mode:




Pressing the ON LINE key switches the user directly to "ON LINE" from any menu position.

4.7. Syntax of Diagrams

The control panel functions will be described using diagrams. These diagrams show the course necessary in order to activate a certain function.

First the elements of the diagrams are explained:

The sequence on the left describes which keys have to be pressed briefly in succession.

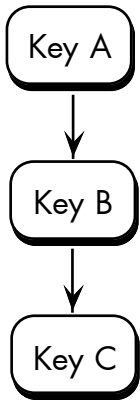

In this example key A has to be pressed first. Then key A is released and key B has to be pressed. Then key B has to be released and key C has to be pressed.

["Message"]

The "Panel display" column shows the display messages corresponding to the sequences listed on the left.

In the column "Notes" explanations to particular operational steps are given.


5. Panel Functions



For the panel functions described in the following, the printer is presumed to be turned on and in the ON LINE mode.





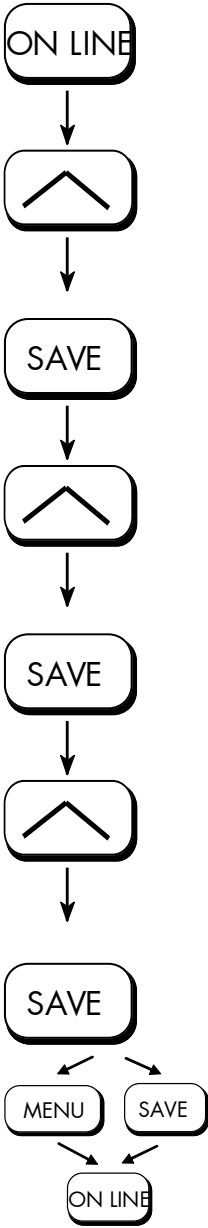





5.1. Display Language Selection

This function enables the user to determine the language for the display messages, the status sheet and the font list.

| <u>Panel display</u> | <u>Notes</u> |
|--|--|
|  | <p>[SOLID F140]</p> <p>Turn the printer OFF LINE with this key.</p> <p>[Menu Level 1]</p> <p>...</p> <p>[Configuration]</p> <p>[Interface]</p> <p>Press one of the ARROW keys until [Language] is displayed.</p> <p>...</p> <p>[Language]</p> <p>[German]</p> <p>Press one of the ARROW keys until the desired language (e.g. English) is displayed.</p> <p>...</p> <p>[English]</p> <p>The display language English is selected.</p> <p>[Save as Setup?]</p> <p>In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again.</p> |

5.2. Page Length Adjustment



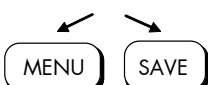








After inserting new material (e.g. paper) this function is used to adjust the printer to the new page length. Values from 7 to 24 inches are settable. The default page length value is 12 inches for Europe, 11 inches for North America.

| <u>Panel display</u> | <u>Notes</u> |
|---|--|
|  | |
| ↓ | |
|  | [SOLID F140] |
| ↓ | [Menu Level 1] |
| ↓ | ... |
|  | [Paper Menu] |
| ↓ | Press the SAVE key to select the paper menu. |
|  | [Page Length] |
| ↓ | Press the SAVE key to adjust the page length. |
|  | [in Inch] |
| ↓ | Inch = currently selected measuring unit (alternative the measuring units mm or 1/300 inch can be chosen with the ARROW keys). |
|  | ... |
| ↓ | [Digit4 12.00] |
|  | Pressing one of the ARROW keys changes the value of the current position (Digit 4 = left digit, in this example: 1). |
| ↓ | Pressing the SAVE key moves you to the next digit (the MENU key moves you back). |
| ↓ | Values from 7 to 24 inches are settable (in 1/6 inch steps). |
|  | [Digit1 12.33] |
| ↓ | The page length is changed to 12.33 inches. |
|  | [Save as Setup?] |
| ↓ | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |
|  | |

Note If the option '**Paper Request**' is chosen (by the following change of configuration: CONFIG 32: Bit 2 set to 1), the printer goes OFF LINE not only in case of paper end, but also after every printer turn on and after every paper size adjustment, too.
The panel display shows the message [Load Paper]
After loading the corresponding paper the printer is turned ON LINE by using the ON LINE key.

5.3. Paper Width Adjusting (Format Width)





This function is used to adjust the format width (print width) to the actually used paper format.

| <u>Panel display</u> | <u>Notes</u> |
|---|-------------------|
|  | |
| ↓ | |
|  | [SOLID F140] |
| ↓ | [Menu Level 1] |
|  | ... |
| ↓ | [Paper Menu] |
|  | |
| ↓ | [Page Length] |
|  | ... |
| ↓ | [Paper Width] |
|  | |
| ↓ | [in Inch] |
|  | ... |
| ↓ | [Digit4 08.51] |
|  | |
| ↓ | ... |
|  | [Digit1 08.53] |
|  | [Save as Setup?] |
|  | |

Note: Information for „Paper Request“ can be found in section 5.2 Page Length Adjustment.

5.4. Printing the Status Sheet

This function generates a status sheet.
The status sheet contains information about the current printer configuration and the available fonts.

| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|---|
| | [SOLID F140] | |
|  | | Turn the printer OFF LINE with this key. |
| ↓ | | |
|  | [Menu Level 1] | Press the SAVE key. Menu level 1 is selected. |
| ↓ | | |
|  | [Status Sheet] | Press the SAVE key again. |
| ↓ | | |
|  | [Status Sheet] | A status sheet is printed. |
| | | The printer is turned ON LINE again. |

Status sheet contents:

The first lines, entitled SERVICE INFORMATION, contain hexadecimal coded configuration parameters.

Printed in plain text:






- Controller version / memory / serial number
- Firmware release
- Interface
 - parameters of Parallel, USB, Network (Ethernet)
- Network
 - parameters and addresses
- Printer emulation
- User-RAM / free User-RAM
- Input data buffer
- Transparent code
- Paper size
- Default margins top / left
 bottom / right
- Default character code
- Options
- Fonts installed (Font banks)

Note: Use the panel function Printing the Font List to show the fonts installed (see section 5.8).

5.5. Printing the Menu Page

This function prints a survey of the available panel functions.

Note: When printing the menu page please use a large paper.

| <u>Panel display</u> | <u>Notes</u> |
|--|---|
| [SOLID F140] | |
|  ↓ | Turn the printer OFF LINE with this key. |
| [Menu Level 1] | |
|  ↓ | Menu level 1 is selected. |
| [Status Sheet] | |
|  ↓ | Press one of the ARROW keys until [Menu Page] is displayed. |
| ... | |
| [Menu Page] | |
|  ↓ | A menu structure presentation of the SOLID F140 (see section 4.6) is printed. |
| [Menu Page] | |
|  | The printer is turned ON LINE again. |


5.6. Selecting the Number of Printpages per Page Format (Two-Up Mode)

Activating this function determines the arrangement of several printpages per page format (paper width resp. page length).

| <u>Panel display</u> | <u>Notes</u> | |
|---|---|--|
| <pre> graph TD A([ON LINE]) --> B([^]) B --> C([SAVE]) C --> D([^]) D --> E([SAVE]) E --> F([v]) F --> G([SAVE]) G --> H([v]) H --> I([SAVE]) I --> J([MENU]) I --> K([SAVE]) J --> L([ON LINE]) K --> L </pre> | <p>[SOLID F140]</p> <p>[Menu Level 1]</p> <p>...</p> <p>[Paper Menu]</p> <p>[Page Length]</p> <p>...</p> <p>[Two-Up Mode]</p> <p>[Y-Direction]</p> <p>...</p> <p>[X-Direction]</p> <p>[X-Direction: OFF]</p> <p>...</p> <p>[X-Direction: 2]</p> <p>[Save as Setup?]</p> | <p>Turn the printer OFF LINE with this key.</p> <p>Press one of the ARROW keys until [Paper Menu] is displayed.</p> <p>Press the SAVE key to select the paper menu.</p> <p>Press one of the ARROW keys until [Two-Up Mode] is displayed.</p> <p>Press the SAVE key to select the function Two-Up mode.</p> <p>Press one of the ARROW keys to effect the adjustment of the Two-Up mode to the X-direction (cross to the print direction).</p> <p>Press the SAVE key to set the Two-Up mode.</p> <p>By pressing the ARROW UP or DOWN key the number of print pages cross to the print direction can be altered. The maximum number of print pages being adjustable next to each other is 9.</p> <p>Here the number of print pages per format width was altered to 2.</p> <p>In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again.</p> |

Example:

The printer SOLID F140 processes fanfold paper with a width up to 18 inches (17" printable). When the Two-Up mode is chosen, each time 2 images of A4 are printed side by side.

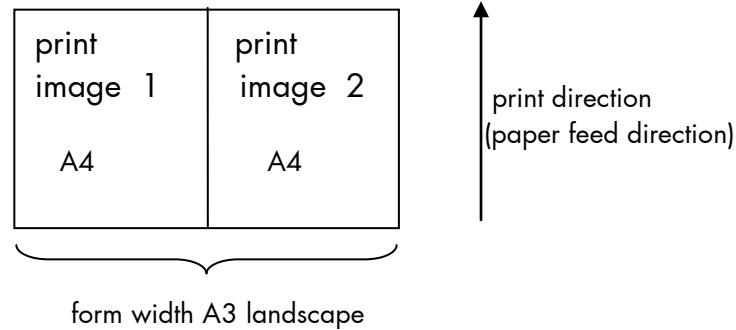**Note:**


All other page parameters have to be set optionally in accordance to the requirements.

A simultaneous combination of several print images per form length and several print images per form width isn't possible until now.

5.7. Generating Test Prints (Sliding Pattern)




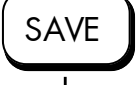

This function generates a series of test prints without sending data to the printer.

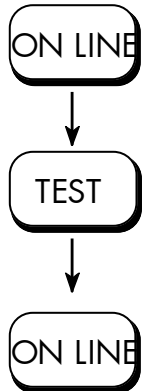These test prints facilitate error analysis.

| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|---|
|  <pre> graph TD A(ON LINE) --> B(TEST) B --> C(ON LINE) </pre> | [SOLID F140] | Turn the printer OFF LINE with this key. |
| | [Menu Level 1] | A status sheet is generated (possibly printed on several pages) |
| | [Menu Level 1] | The printer is turned ON LINE again. |

Another way to activate the function:

see the following page !






| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|--|
|  | [SOLID F140] | Turn the printer OFF LINE with this key. |
| ↓ | | |
|  | [Menu Level 1] | Menu level 1 is selected. |
| ↓ | | |
|  | [Status Sheet] | Press one of the ARROW keys until [Sliding Pattern] is displayed. |
| ↓ | ... | |
|  | [Sliding Pattern] | A series of test prints is generated. |
| ↓ | | |
|  | [Sliding Pattern] | The printer is turned ON LINE again. |



The printing out of test prints can be stopped by pushing the ON LINE key.

5.8. Printing the Font List











This function generates a list of all fonts installed to the printer. The font list shows demo prints of all fonts and, in addition, the concerning PCL selection commands. These commands contain information on font width and font height (see section 5.20 Font Selection, too).

| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|--|
|  | [SOLID F140] | |
| ↓ | | Turn the printer OFF LINE with this key. |
|  | [Menu Level 1] | |
| ↓ | | Menu Level 1 is selected. |
|  | [Status Sheet] | |
| ↓ | ... | Press one of the ARROW keys until [Font List] is displayed. |
|  | [Font List] | |
| ↓ | | The font list is printed. |
|  | [Font List] | |
| | | The printer is turned ON LINE again. |

5.9. Choosing Print Resolution

This function allows the user to choose the current print resolution.

If, after a particular resolution is chosen, the print data stream indicates a different resolution (e.g. via a WINDOWS print driver), the second print resolution will be used only for that job.
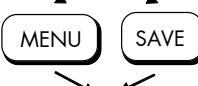
| <u>Panel display</u> | <u>Notes</u> |
|---|--|
|  | |
| ↓ | |
|  | [SOLID F140] |
| ↓ | [Menu Level 1] |
|  | ... |
|  | [Engine] |
| ↓ | Menu item Engine is selected. |
|  | [Resolution] |
| ↓ | Menu item Resolution is selected. |
|  | [300 dpi] |
| ↓ | ... |
|  | [600 dpi] |
| ↓ | 600 dpi resolution is selected. |
|  | [Save as Setup?] |
|  | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |
|  | |





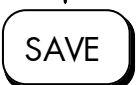

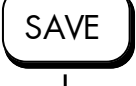

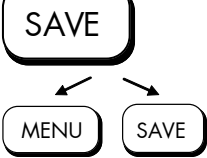

Remarks on choosing print resolution (Fonts):

By selecting 300 dpi resolution the printing system will be compatible for all applications (300 dpi data stream), also the 300 dpi font banks (bitmap writing) are available.

If 600 dpi resolution is chosen, the corresponding fonts must be loaded into the printer server (e.g. True Type fonts, scalable download fonts).





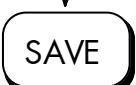




5.10. Configuration of Text Margins

This function sets text margins. Margins are expressed in dots at the concerning edge of the paper.

| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|---|
|  | [SOLID F140] | Turn the printer OFF LINE with this key. |
| ↓ | [Menu Level 1] | |
|  | ... | Press one of the ARROW keys until [Page Menu] is displayed. |
| ↓ | [Page Menu] | |
|  | [Font Number] | |
| ↓ | ... | Press one of the ARROW keys until [Margin] is displayed. |
|  | [Margin] | |
| ↓ | [Left] | |
|  | ... | Press one of the ARROW keys until the desired margin is displayed. |
| ↓ | [from Right] | |
|  | [Digit4 0089] | Pressing one of the ARROW keys changes the value of the current digit (Digit 4 = left position, in this example: 0). Pressing the SAVE key moves you to the next digit (the MENU key moves you back). |
| ↓ | ... | |
|  | [Digit1 008Z] | |
| ↓ | [Save as Setup?] | The right margin is changed into 87 dot. |
|  | | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |
|  | | |
|  | | |

5.11. Hexdump Mode Activation






Within the Hexdump Mode the printer prints all characters received via interface without any interpretation (hexadecimal coded). This mode helps with error diagnosis. The Hexdump Mode can be activated only temporarily.

| <u>Panel display</u> | <u>Notes</u> |
|---|--------------------------------------|
|  | |
| ↓ | |
|  | [SOLID F140] |
| ↓ | |
|  | [Menu Level 1] |
| ↓ | |
|  | [Status Sheet] |
| ↓ | |
|  | ... |
| ↓ | |
|  | [Hexdump] |
| ↓ | |
|  | [Hexdump] |
| ↓ | |
|  | The Hexdump Mode is activated. |
| ↓ | |
|  | The printer is turned ON LINE again. |

Note: By activating the normal print mode (see next section) or by turning the printer off and on again the printer can be taken out of Hexdump Mode. Time between turning the printer off and on again should be at least 15 seconds.

5.12. Normal Print Mode Activation (incl. FORM FEED)






The normal print mode suspends the Hexdump Mode. This function is activated, when a print job must be continued without turning the printer off and on again. In addition to that the function "Normal Print Mode Activation" is used to produce a FORM FEED.

| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|--|
|  | [SOLID F140] | Turn the printer OFF LINE with this key. |
| ↓ | [Menu Level 1] | |
|  | | Menu level 1 is selected. |
| ↓ | [Status Sheet] | |
|  | ... | Press one of the ARROW keys until [Normal Print/FF] is displayed. |
| ↓ | [Normal Print/FF] | |
|  | | The normal print mode is activated. |
| ↓ | [Normal Print/FF] | |
|  | | The printer is turned ON LINE again. |

Note: After activating the normal print mode a FORM FEED is released automatically and one sheet is put out. This is necessary because after a test in the Hexdump Mode it is possible that data can remain in the input buffer unintentionally (cause: in the Hexdump Mode no control characters are evaluated and no FORM FEED is effected).


5.13. Clearing the Input Buffer (Cancel Job)

This function permits the resumption of a print job at a particular page after a print interruption (e.g. paper jam). The data contained in the input buffer before the interruption are cleared.

| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|---|
| | [SOLID F140] | |
|  | | Turn the printer OFF LINE with this key. |
| ↓ | [Menu Level 1] | |
|  | | Menu level 1 is selected. |
| ↓ | [Status Sheet] | |
|  | | Press one of the ARROW keys until [Cancel Job] is displayed. |
| ↓ | ... | |
| | [Cancel Job] | |
|  | | All data contained in the input buffer will be cleared. |
| ↓ | [Cancel Job] | |
|  | | The printer is turned ON LINE again. |

5.14. Print Direction Selection

This function selects the active print orientation (orientation of the whole printout including graphics, etc. on the paper).

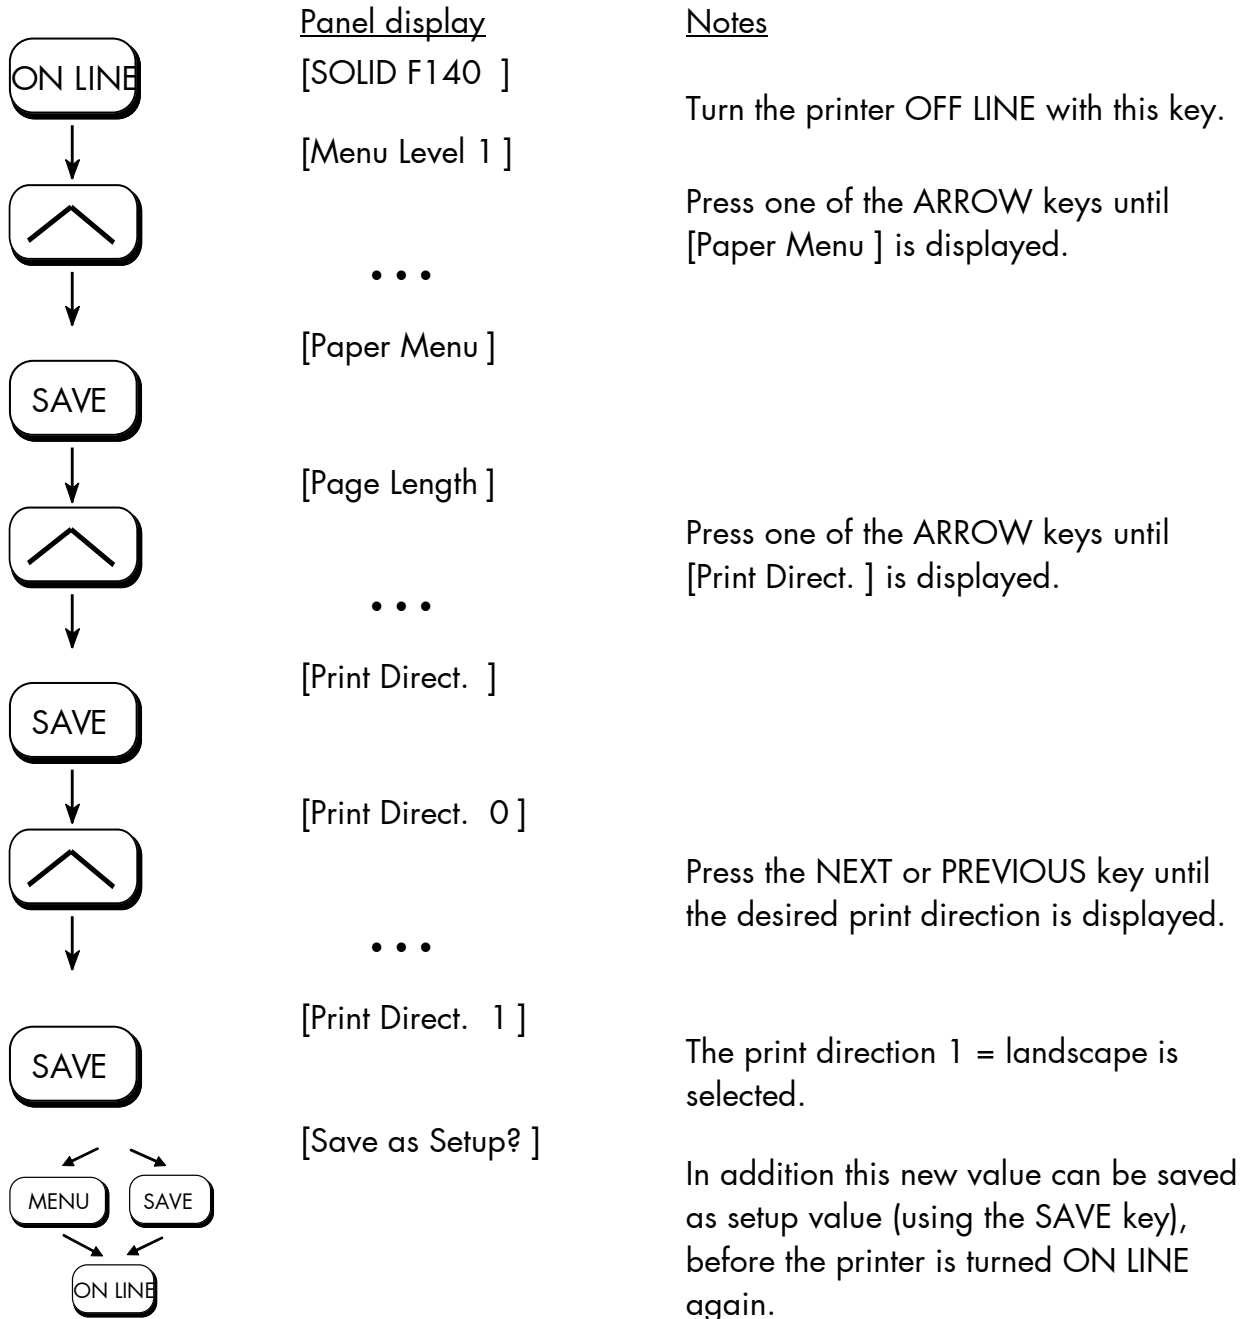


Print direction assignment:

- Print direction 0 = Portrait (upright format)
- Print direction 1 = Landscape (horizontal format)
- Print direction 2 = Portrait upside down
- Print direction 3 = Landscape upside down

5.15. Data Interface Configuration

This function is used to set the interface parameters.

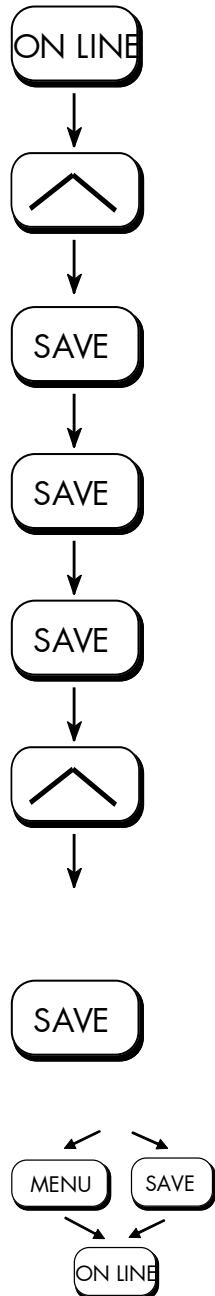











Panel display
 [SOLID F140]
 [Menu Level 1]
 ...
 [Configuration]
 [Interface]
 [SIA Timeout]
 [30 s]
 ...
 [40 s]
 [Save as Setup?]

Notes
 Turn the printer OFF LINE with this key.
 Press one of the ARROW keys until [Configuration] is displayed.
 The currently set value for the timeout is displayed (here: 30 seconds).
 Pressing one of the ARROW keys changes the value of the timeout.
 The timeout (the waiting period for SIA to switch to the next interface) is increased to 40 seconds.
 In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again.

Note: The printer uses SIA (Simultaneous Interface Administration) to check, which interface is currently used for the transfer of print data.

5.16. Emulation Selection

With this function you can change the active emulation.

| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|--|
| | [SOLID F140] | |
|  | | Turn the printer OFF LINE with this key. |
| ↓ | | |
| | [Menu Level 1] | |
|  | | Press one of the ARROW keys until [Configuration] is displayed. |
| ↓ | ... | |
| | [Configuration] | |
|  | | |
| ↓ | [Interface] | |
|  | | Press one of the ARROW keys until [Emulation] is displayed. |
| ↓ | ... | |
| | [Emulation] | |
|  | | |
| ↓ | [SOLID Standard] | |
|  | | Press one of the ARROW keys until the desired emulation (e.g. HP PCL 5) is displayed. |
| ↓ | ... | |
| | [HP PCL 5] | |
|  | | The emulation HP PCL 5 is selected. |
| ↙ ↘ | | |
|   | [Save as Setup?] | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |
| ↙ ↘ | | |
|  | | |

Available emulations:

Standard:

Microplex IDOL,
HP LaserJet (PCL 5),
Diablo 630
Epson FX,
IBM Proprinter,
TIFF (CCITT group 4),
µPostscript
ANSI Genicom,
AGFA Reno,
S3000 Lineprinter,
HPGL (7475A),
DEC LN03+,
Tally MT 6xx,
Bull MP6090,
IDS/IDS2,
HP DesignJet (HPGL-2),
XML,
CUPS-Raster

Optional:

Kyocera Prescribe,
ZPL II (Zebra Programming Language),
Datamax (FGL),
Eltron EPL2,
LDC (Label Description Language),
Printronic IGP/PGL,
QMS (Magnum) Code V,
XEROX XES,
IPDS (via PPD/PPR Protocol),
LabelPoint













(More emulations on request)

Notice:

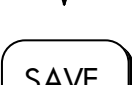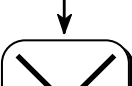The brand names mentioned are registered trademarks of the enterprises name








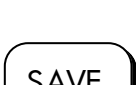



5.17. Transparent Code Adjustment

This function configures the transparent code. Using the transparent code enables you to initiate the commands of the page description language IDOL by **printable** characters. The transparent code pre-setting is 2625. These are the ASCII character codes (hexadecimal) for the characters &% (ref. IDOL Programming Manual).

| <u>Panel display</u> | <u>Notes</u> |
|---|--|
|  | |
| [SOLID F140] | Turn the printer OFF LINE with this key. |
| ↓ | |
|  | [Menu Level 1] |
| ↓ | ... |
|  | [Configuration] |
| ↓ | |
|  | [Interface] |
| ↓ | ... |
|  | [Transparent Code] |
| ↓ | |
|  | [Digit4 2625] |
| ↓ | |
|  | ... |
| ↓ | |
|  | [Digit1 2626] |
| ↓ | |
|  | [Save as Setup?] |
| ↙ ↘ | |
|   | |
| ↙ ↘ | |
|  | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |



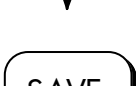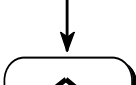

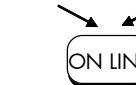
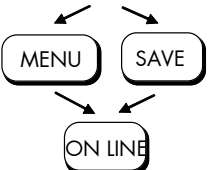
5.18. Selection of Memory Distribution (Input Buffer)

This function enables the user to choose the distribution of the available RAM memory between input buffer and macro/download memory.

| <u>Panel display</u> | <u>Notes</u> |
|---|--|
|  | [SOLID F140] |
| ↓ | Turn the printer OFF LINE with this key. |
|  | [Menu Level 1] |
| ↓ | Press one of the ARROW keys until [Configuration] is displayed. |
| ... | ... |
|  | [Configuration] |
| ↓ | Press one of the ARROW keys until [Input Buffer] is displayed. |
|  | [Interface] |
| ↓ | ... |
|  | [Input Buffer] |
| ↓ | Press one of the ARROW keys until the desired memory distribution is displayed. The input buffer size is specified in kilobyte (kB) or in percent of the installed memory. |
|  | [32 kB] |
| ↓ | ... |
|  | [100 kB] |
|  | 100 kB is selected as input buffer. |
| ↓ | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |
|  | [Save as Setup?] |
|  | |
|  | |








5.19. Setting to Factory Default

This function back-outs all configurations to factory defaults.

| <u>Panel display</u> | <u>Notes</u> |
|---|---|
|  | |
| ↓ | |
|  | [SOLID F140] |
| ↓ | [Menu Level 1] |
| ↓ | ... |
|  | [Configuration] |
| ↓ | [Interface] |
|  | ... |
| ↓ | [Factory Default] |
|  | [Save as Setup?] |
|  | <p>Only if you press the SAVE key a second time the configuration will be back-outed to factory defaults.</p> <p>The printer is turned ON LINE again.</p> |

5.20. Font Selection

This function selects the active font. Select font number out of the list of available fonts.
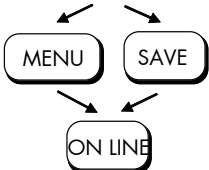
| <u>Panel display</u> | <u>Notes</u> |
|---|-----------------------------------|
|  | |
| ↓ | |
|  | [SOLID F140] |
| ↓ | [Menu Level 1] |
| ↓ | ... |
|  | [Page Menu] |
| ↓ | [Font Number] |
|  | [Font 0600] |
| ↓ | |
|  | |
| ↓ | ... |
|  | [Font 5507] |
| ↓ | [Save as Setup?] |
|  | The font number 5507 is selected. |

Turn the printer OFF LINE with this key.

Press one of the ARROW keys until [Page Menu] is displayed.

Press one of the ARROW keys until the desired font number (5507 Langeoog e.g.) is displayed.

In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again.

The **SOLID F140 standard equipment** contains the following **fonts**:

| <u>Font no.</u> | <u>Font width</u> | <u>Font height</u> | <u>Font name</u> |
|-----------------|-------------------|--------------------|------------------|
| 0600 | 10 | 12 | Kurilen |
| 0602 | 10 | 12 | Kurilen Italic |
| 0610 | 12 | 10.1 | Kurilen |
| 1710 | 12 | 10.1 | Kurilen Italic |
| 4508 | P | 8.1 | Helgoland |
| 4510 | P | 10 | Helgoland |
| 4714 | P | 14.4 | Helgoland Bold |
| 5507 | 20 | 7 | Langeoog |
| 5508 | 16.6 | 7.9 | Langeoog |
| 5509 | 15 | 9.1 | Langeoog |
| 6610 | 10 | 10.1 | Juist Monosp. |
| 9210 | P | 10.1 | Tasmanien |
| 9310 | P | 10.1 | Tasmanien Italic |
| 2000 | P | SC | Tasmanien |
| 9900 | P | SC | Neuwerk |

Resumption of this standard font list see next page.

Explanations:

Font width:

Character distance in CPI (Characters Per Inch).

P = proportional, (meaning that each character has an individual width).

Font height:

Font height from the lowest descender to the upper edge of the highest character, measured in graphical points (1/72 inch).

SC = scalable.

| | <u>Font no.</u> | <u>Font width</u> | <u>Font height</u> | <u>Font name</u> |
|------------------|-----------------|-------------------|--------------------|---------------------------------|
| | 0050 | SC | | Plakatschrift |
| | 0590 | SC | | OCR /B |
| | 0591 | SC | | OCR /A |
| | 6600 | SC | | Juist Monospaced |
| PCL 5 compatible | 0699 | SC | | Kurilen |
| | 1700 | SC | | Kurilen Italic |
| | 1800 | SC | | Kurilen Bold |
| | 1900 | SC | | Kurilen Bold Italic |
| | 5500 | SC | | Langeoog |
| | 5600 | SC | | Langeoog Bold |
| | 5700 | SC | | Langeoog Italic |
| | 5800 | SC | | Langeoog Bold Italic |
| | 2100 | P | SC | Texel Bold |
| | 2200 | P | SC | Texel Italic |
| | 2300 | P | SC | Texel Bold Italic |
| | 9800 | P | SC | Neuwerk Italic |
| | 9500 | P | SC | Neuwerk Bold Italic |
| | 9600 | P | SC | Neuwerk Bold |
| | 0060 | SC | | Plakatschrift |
| | 9501 | P | SC | Neuwerk-II Condensed Italic |
| | 9601 | P | SC | Neuwerk-II Condensed Bold Ital. |
| | 9801 | P | SC | Neuwerk-II Condensed Bold |
| | 9901 | P | SC | Neuwerk-II Condensed |
| | 0530 | P | SC | PiktoWin |
| | 5100 | P | SC | Amrum |
| | 5200 | P | SC | Amrum Bold |
| | 5300 | P | SC | Amrum Italic |
| | 7500 | P | SC | Antigua |
| | 7700 | P | SC | Antigua Bold |
| | 7800 | P | SC | Antigua Italic |
| | 7900 | P | SC | Antigua Bold Italic |
| | 9199 | P | SC | Tasmanien-II Bold Italic |
| | 9299 | P | SC | Tasmanien-II |
| | 9399 | P | SC | Tasmanien-II Italic |
| | 9499 | P | SC | Tasmanien-II Bold |

Notes: Additional fonts can be selected from the font catalogue depending upon the memory capacity.

You can use the panel function Printing the Font List (see section 5.8) to generate a list of all fonts installed to the printer.

5.21. Text Orientation Selection

This function selects the active text orientation.






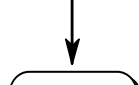




| <u>Panel display</u> | <u>Notes</u> |
|----------------------|--|
| | |
| [SOLID F140] | Turn the printer OFF LINE with this key. |
| [Menu Level 1] | Press one of the ARROW keys until [Page Menu] is displayed. |
| ... | |
| [Page Menu] | |
| [Font Number] | |
| ... | Press one of the ARROW keys until [Orientation] is displayed. |
| [Orientation] | |
| [Orientation 0] | |
| ... | Press one of the ARROW keys until the desired orientation is displayed. |
| [Orientation 1] | The orientation 1 = landscape is selected. |
| [Save as Setup?] | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |

Text orientation assignment:

- Orientation 0 = Portrait (upright format)
- Orientation 1 = Landscape (horizontal format)
- Orientation 2 = Portrait upside down
- Orientation 3 = Landscape upside down











5.22. Symbol Code Selection

This function selects the active symbol code.


| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|--|
|  | [SOLID F140] | Turn the printer OFF LINE with this key. |
| ↓ | [Menu Level 1] | Press one of the ARROW keys until [Page Menu] is displayed. |
|  | ... | |
| ↓ | [Page Menu] | |
|  | [Font Number] | |
| ↓ | ... | Press one of the ARROW keys until [Symbol Code] is displayed. |
|  | ... | |
| ↓ | [Symbol Code] | |
|  | [902, IBM PC-II] | |
| ↓ | ... | Press one of the ARROW keys until the desired symbol code is displayed. |
|  | ... | |
| ↓ | [901, IBM PC-I] | |
|  | [Save as Setup?] | The symbol code 901, IBM PC-I is selected. |
| ↙ ↘ | | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |
|  | | |
|  | | |
| ↙ ↘ | | |
|  | | |

5.23. Image Shifting to the X-Direction

This function shifts the print image in relation to the paper to the X-direction (crosswise the print direction). Because the paper feed is always centered to the middle in the SOLID F140, the image shifting might be necessary when using e.g. special paper formats to shift the X-coordinate zero to the left paper edge.





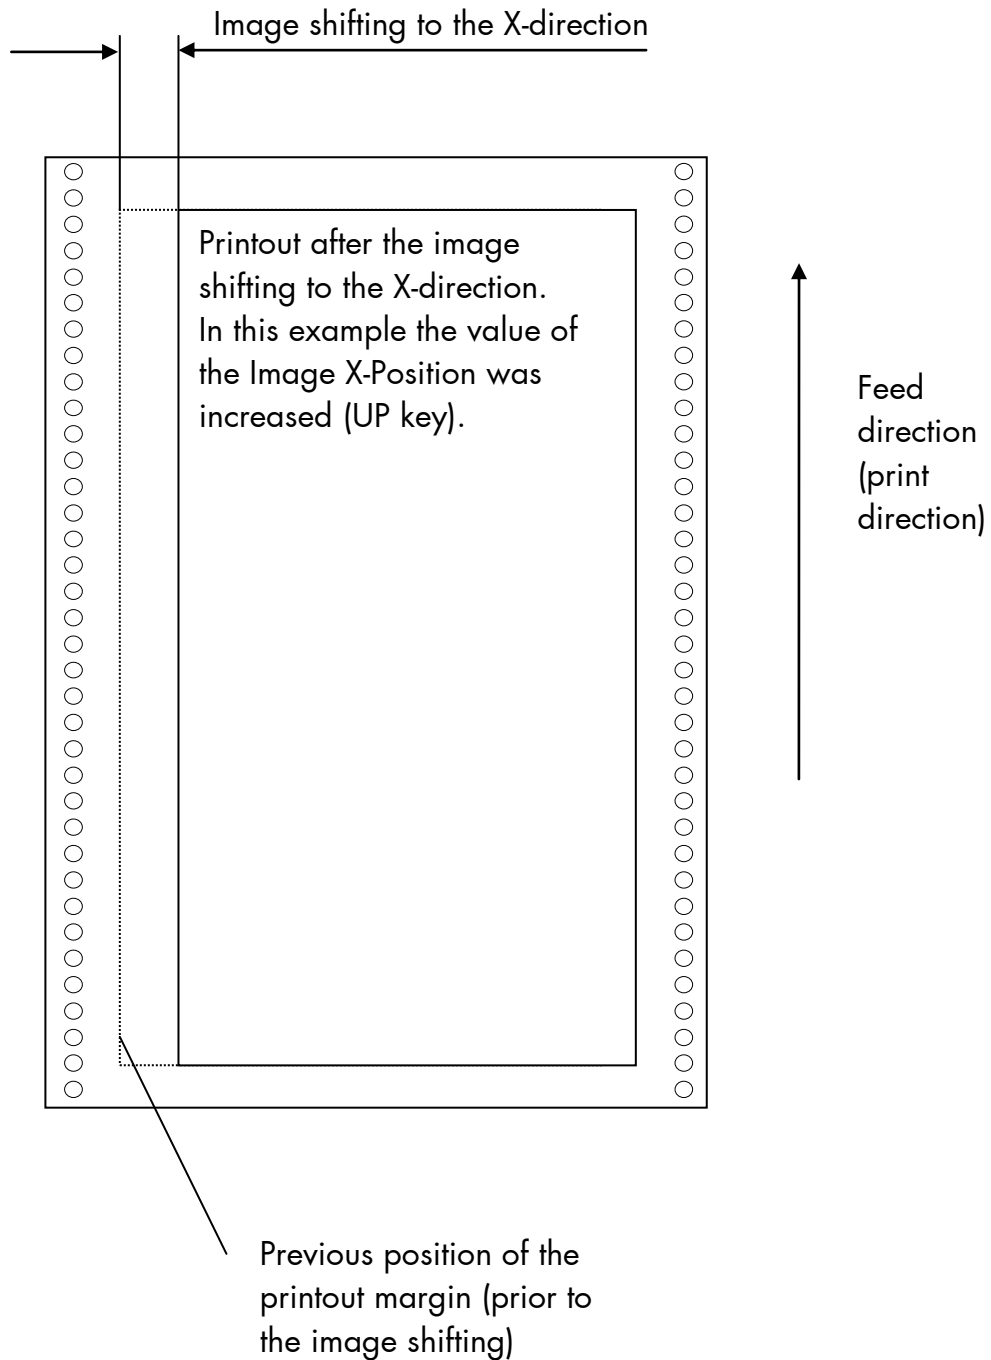


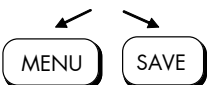

| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|---|
|  | [SOLID F140] | Turn the printer OFF LINE with this key. |
| ↓ | [Menu Level 1] | |
|  | ... | Press one of the ARROW keys until [Engine] is displayed. |
| ↓ | [Engine] | |
|  | | |
| ↓ | [Resolution] | Press one of the ARROW keys until [Image X-Pos.] is displayed. |
|  | ... | |
| ↓ | [Image X-Pos.] | The panel function Image Shifting to the X-Direction is selected. |
|  | | |
| ↓ | [X-Pos: xxx mm] | xxx = currently set value. (Default value = 0.0 mm). Operating one of the ARROW keys the value for the image shift can be altered. Values from 0 up to approx. ±25 mm are settable, so a max. image shifting of appr. ±1 Inch can be reached. |
|  | ... | |
| ↓ | [X-Pos: 16.0 mm] | Now the new image X-Position is saved In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |
|  | | |
| ↙ ↘ | [Save as Setup?] | |
|  | | |
|  | | |
| ↙ ↘ | | |
|  | | |

Example for shifting the image to the X-direction:



5.24. Image Shifting to the Y-Direction

This function shifts the print image in relation to the paper to the Y-direction (print direction).

| <u>Panel display</u> | <u>Notes</u> |
|---|-------------------|
|  | |
| ↓ | |
|  | [SOLID F140] |
| ↓ | [Menu Level 1] |
| ↓ | ... |
|  | [Engine] |
| ↓ | [Resolution] |
|  | ... |
| ↓ | [Image Y-Pos.] |
|  | [Y-Pos: yyy mm] |
| ↓ | ... |
|  | [Y-Pos: 19.0 mm] |
| ↓ | [Save as Setup?] |
|  | |
| ↓ | |
|  | |
| ↓ | |
|  | |

Turn the printer OFF LINE with this key.

Press one of the ARROW keys until [Engine] is displayed.

Press one of the ARROW keys until [Image Y-Pos.] is displayed.


The panel function Image Shifting to the Y-Direction is selected.

yyy = currently set value.
 (Default value = 0.0 mm).
 Operating the ARROW keys the image can be shifted relative to the paper. Values from 0 up to ±42 mm are settable, so a max. image shifting of approx. ± 1 2/3 Inch can be reached.

Now the new image Y-Position is saved.





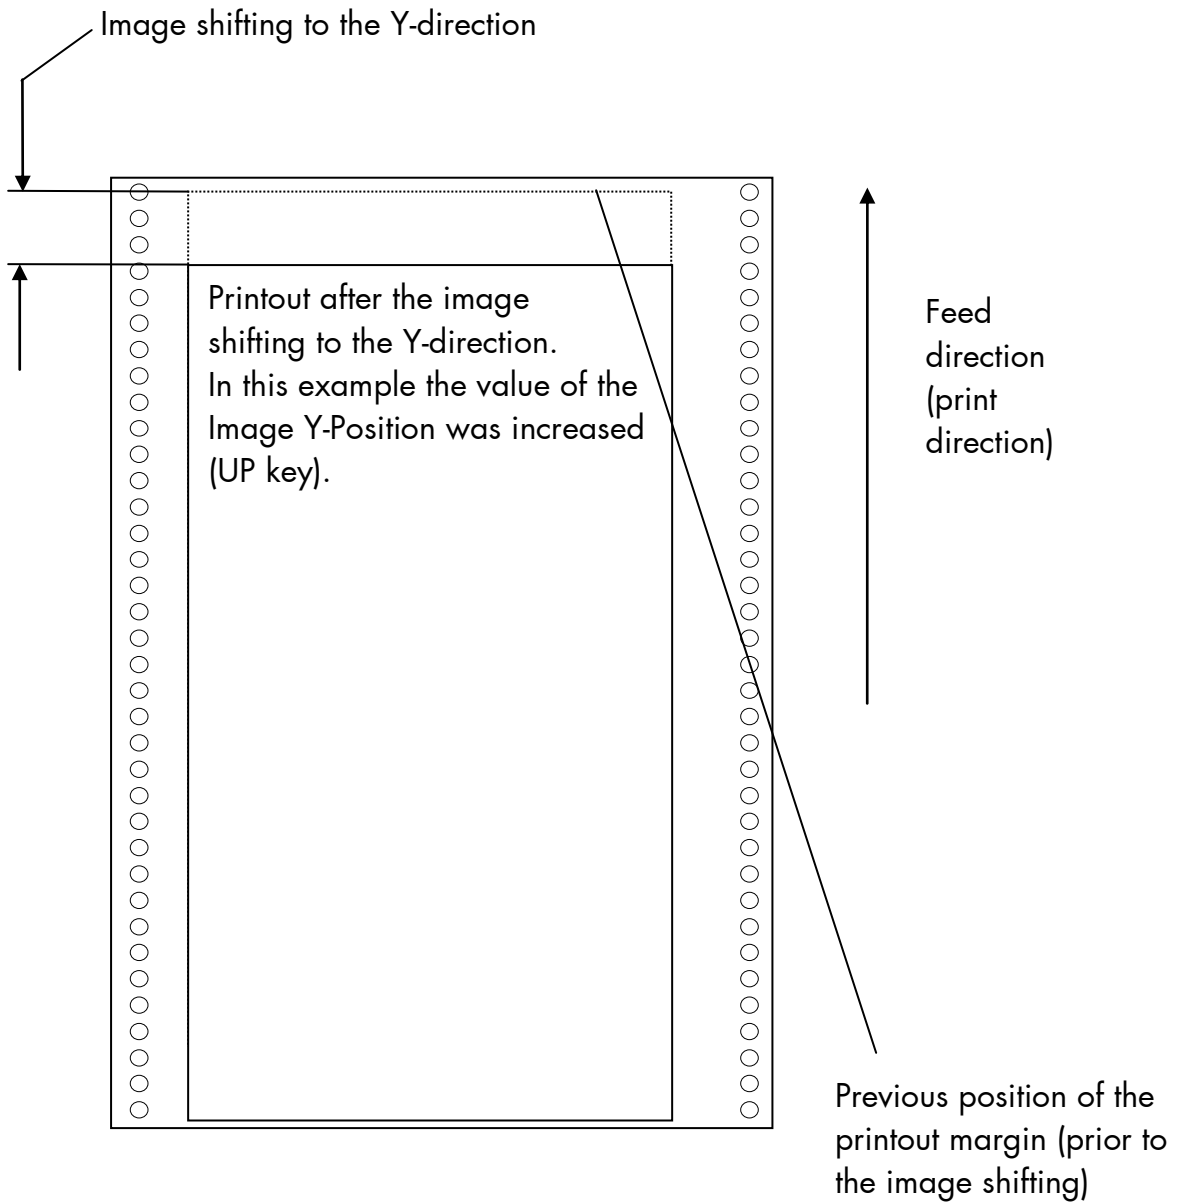


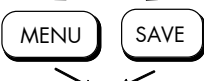

In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again.

Example for shifting the image to the Y-direction:










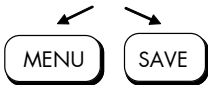

5.25. Lines per Inch Setting (Line Spacing)

This function sets the number of lines per inch. This setting is effective only in case of using the printer as a line printer. With a small number of lines per inch, line spacing will be relatively large. (Ref. IDOL Programming Manual).

| <u>Panel display</u> | <u>Notes</u> |
|---|---|
|  | |
| ↓ | |
|  | Turn the printer OFF LINE with this key. |
| ↓ | |
| [SOLID F140] [Menu Level 1] ... | Press one of the ARROW keys until [Page Menu] is displayed. |
| ↓ | |
|  | |
| ↓ | |
|  | Press one of the ARROW keys until [Line Spacing] is displayed. |
| ↓ | |
| [Font Number] ... | |
| ↓ | |
|  | Pressing one of the ARROW keys changes the value of the current digit (Digit 4 = left position, in this example: 0). Pressing the SAVE key moves you to the next digit (the MENU key moves you back). |
| ↓ | |
|  | |
| ↓ | |
| [Digit4 006.5] ... | |
| ↓ | |
|  | 6.5 lpi = currently set value. (lines per inch). The number of lines per inch was increased to 10 lpi. |
| ↓ | |
| [Digit1 010.0] [Save as Setup?] | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |
|  | |
|  | |

5.26. Number of Characters per Inch Setting (Character Spacing)

This function sets the number of characters per inch. This setting is effective only in case of using a line printer emulation. With a small number of characters per inch, character spacing will be relatively large. (Ref. IDOL Programming Manual).

| <u>Panel display</u> | <u>Notes</u> |
|---|--|
|  | Turn the printer OFF LINE with this key. |
| ↓ | |
|  | Press one of the ARROW keys until [Page Menu] is displayed. |
| ↓ | |
|  | |
| ↓ | |
|  | Press one of the ARROW keys until [Char. Spacing] is displayed. |
| ↓ | |
|  | |
| ↓ | |
|  | |
| ↓ | |
|  | |
| ↓ | |
|  | |
| ↓ | |
|  | |

[SOLID F140]
 [Menu Level 1]
 ...
 [Page Menu]
 [Font Number]
 ...
 [Char. Spacing]
 [Digit4 013.3]
 ...
 [Digit1 012.0]

Notes

Turn the printer OFF LINE with this key.

Press one of the ARROW keys until [Page Menu] is displayed.

Press one of the ARROW keys until [Char. Spacing] is displayed.








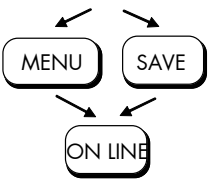
13.3 cpi = currently set value. (characters per inch). Pressing one of the ARROW keys changes the value of the current digit (Digit 4 = left position, in this example: 0). Pressing the SAVE key moves you to the next digit (the MENU key moves you back).

The number of characters per inch was reduced to 12 cpi.

In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again.

5.27. Print Density Setting








Using this function the density of the printed characters can be changed.

| | <u>Panel display</u> | <u>Notes</u> |
|---|----------------------|--|
|  | [SOLID F140] | Turn the printer OFF LINE with this key. |
| ↓ | [Menu Level 1] | |
|  | ... | Press one of the ARROW keys until [Engine] is displayed. |
| ↓ | [Engine] | |
|  | [Resolution] | Press one of the ARROW keys until [Print Density] is displayed. |
| ↓ | ... | |
|  | [Density] | |
|  | [Density 45] | 45 = currently set value. |
| ↓ | ... | Press one of the ARROW keys to change the density. Values from 0 up to 62 are settable. |
|  | [Density 50] | |
|  | [Save as Setup?] | The print density is increased, the print image gets darker. Now the new value is saved. |
|  | | In addition this new value can be saved as setup value (using the SAVE key), before the printer is turned ON LINE again. |

5.28. Configuration of Network Parameters (IP Address, e.g.)

The functions of the submenu Network are used to set the parameters for connecting the printer to a network (Ethernet).

Setting the IP address manually:

|  | <u>Panel display</u> | <u>Notes</u> |
|---|--------------------------------------|---|
| ↓ | [SOLID F40] | Turn the printer OFF LINE with this key. |
|  | [Menu Level 1] ... [Network] | Press one of the ARROW keys until [Network] is displayed. |
| ↓ | [SAVE] | Press the SAVE key to select the Network menu. |
| ↓ | [Timeout] | |
|  | ... [Ethernet] | Press one of the ARROW keys until [Ethernet] is displayed. |
| ↓ | [SAVE] | Press the SAVE key to select the Ethernet menu. |
| ↓ | [Duplex/Speed] | |
|  | ... [IP Assign] | Press one of the ARROW keys until [IP Assign] is displayed. |
| ↓ | [SAVE] | Press the SAVE key to select the IP Assign menu. |
| ↓ | [Off] | The current setting value is displayed. |
|  | ... [Manual] | Press one of the ARROW keys until [Manual] is displayed. |
| ↓ | [SAVE] | |
| ↓ | [IP Address] | Press the SAVE key to set the IP address manually. |
| ↓ | [192.168.002.002] | Pressing one of the ARROW keys changes the value of the current digit (left digit first, in this example: 1). Pressing the SAVE key moves you to the next position (the MENU key moves you back, if need be). |
|  | ... | |
| ↓ | [192.168.010.123_] | |
| ↓ | [SAVE] | The new IP address is saved as setup value. |
| ↓ | [Saved !] | |
|  | | The printer is turned ON LINE again. |

Notes: If your network is using DHCP^①, an address can be automatically assigned (select the item **DHCP** from the network submenu IP Assign).

The parameters **Subnet Mask** and **Gateway** are configured in the same way as described above. Please select the concerning panel functions for this (compare section 4.6 Menu Structure).

Select the subitem **Off** from the network menu to switch off the network access.

^① Dynamic Host Configuration Protocol: offers among other things a centralized address management.

Duplex/Speed Setting

This panel function is located in the network menu (submenu Duplex/Speed Setting).

The factory default value is Autonegotiation.

Autonegotiation means that devices on the network agree a transmission mode, which each unit is able to handle, before data transmission starts. By this the printer automatically adjusts itself to maximize link performance.

Hint: Autonegotiation is the recommended setting!

If you set the Duplex/Speed parameters manually, you may experience problems. Wrong settings can slow down the speed of the link (worst case: communication does not occur).

Explanations:

Auto-Negotiation

A Ethernet procedure that allows devices at either end of a link segment to advertise and negotiate modes of operation such as the speed of the link (100 Mbit/s or 10 Mbit/s) and half- or full-duplex operation.

Half duplex

A device can either receive or send data at a given time.

Full duplex

Capability of a device for sending and receiving data at the same time. In the case of full duplex, collision detection is deactivated. A full duplex capable device is able to buffer data packets.

6. Printer Cleaning

By a regular and conscientious performance of the following operations, the printer is guaranteed to always work at an optimum reliability.



After the printing of about 20,000 pages A4 (print density 5 %; compare chapter 10 Specifications) the components listed in this chapter should be cleaned.

Please note:

The printer is provided with a so-called "Page counter". This counter is calibrated to 8.5" (measured in print direction; corresponding to DIN A4 Landscape).

If you want to use the meter readings – in case of printing other formats – for an estimation of the "real number of pages", the meter readings have to be appropriately converted. For every conversion you have to know the page length of the specific printjob.

Example1: In case of printing on DIN A3 (portrait) the meter reading of 20,000 will already be reached after the printing of about 10,000 pages A3.

Example2: If 20,000 pages A4 portrait Two-Up have been printed the number shown by the counter is approx. 14,000.

- Use a neutral detergent or water on a lintfree cloth to remove dust or grease from the cover.
- Do not use detergents or any other devices or tools not mentioned in this manual to avoid damages and unnecessary costs of repairs.
- Please be especially careful to avoid damaging mechanical or electronic modules.




Turn off the SOLID F140 printer and pull the power plug. Make sure, the printer has been switched off for at least 15 minutes before you start cleaning.


6.1. Cleaning the Elements behind the Front Cover



1. Turn off the SOLID F140 printer and pull the power plug. Make sure, the printer has been switched off for at least 15 minutes before you start cleaning the device.
2. Open the front cover of the printer.

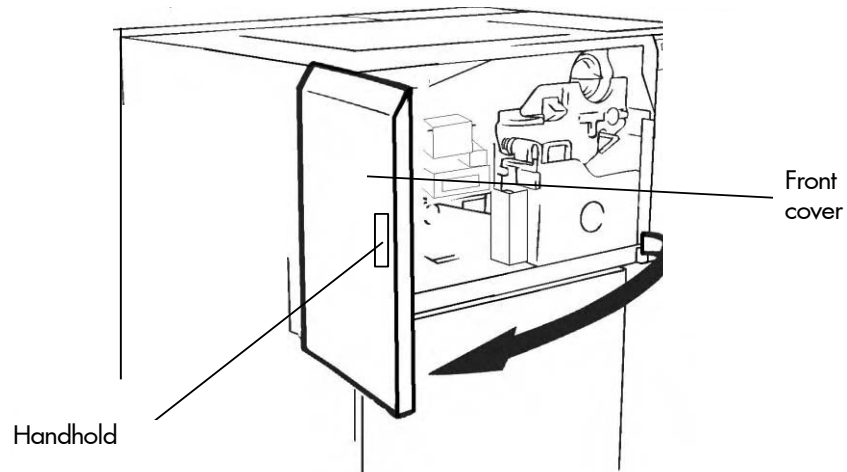


3. Using an anti-static service vacuum cleaner, clean up toner, paper dust or other particles which may have accumulated.
4. Push down the open lever of the waste toner recovery unit and open the unit.

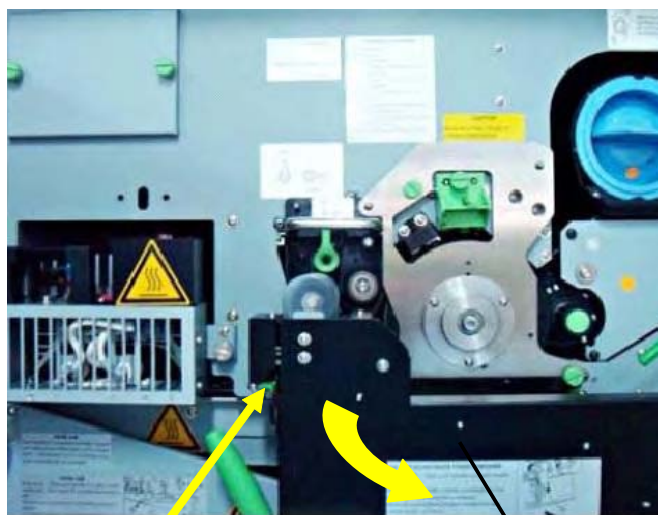


Open lever (green)

Waste toner recovery unit

- Using an anti-static service vacuum cleaner, pick up any dirt on the developer unit or toner cartridge.

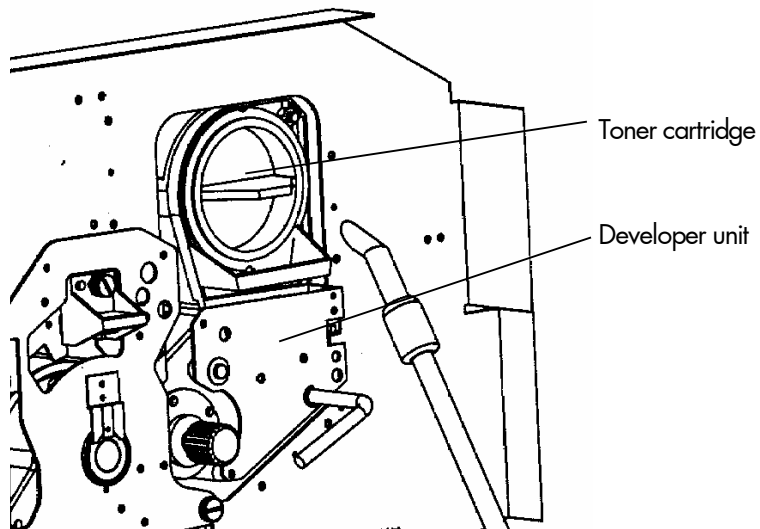

- Clean the drum cleaning unit and the elements around it in the same way.

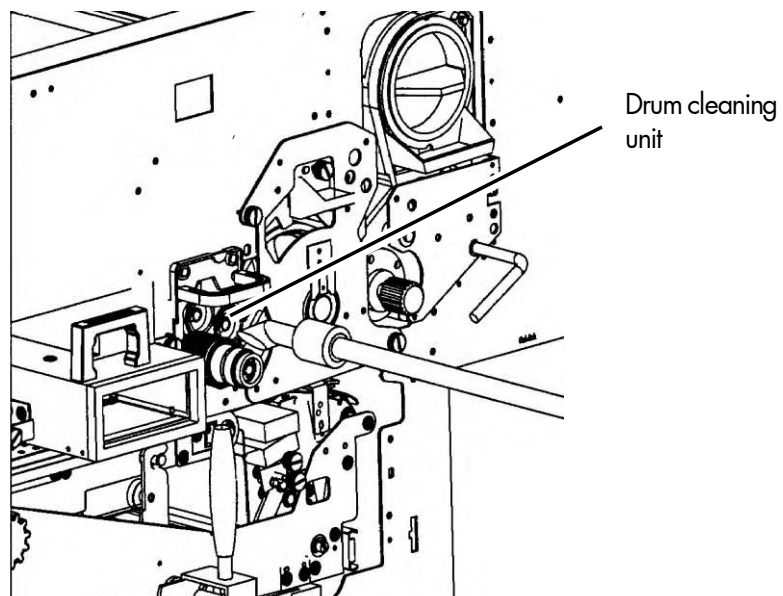

7. Loosen the knurled screws (see figure below) and then remove the dust filter cover.



Knurled screws

8. Pull out the dust filter.




Dust filter

9. Use an anti-static service vacuum cleaner to clean the dust filter area.



10. Insert a new dust filter and reassemble the cover using the two knurled screws.

11. Also vacuum the fuser unit and the area around it.

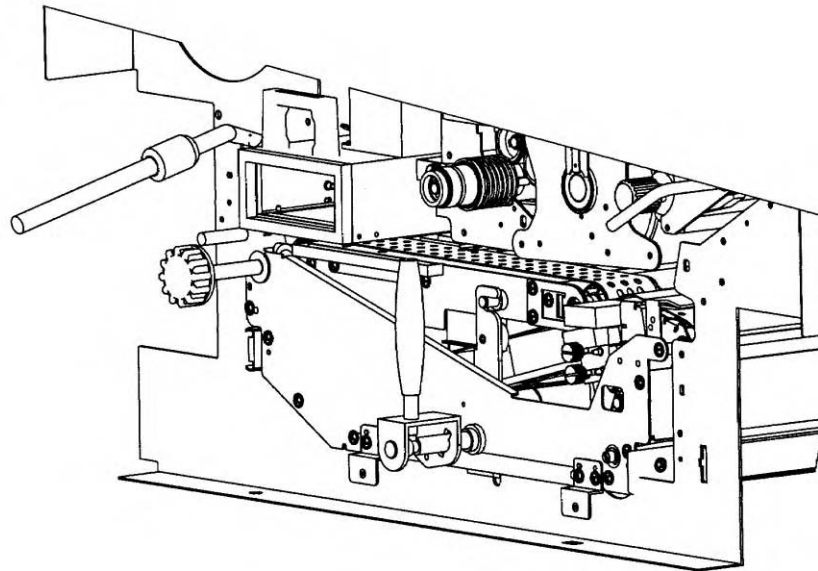

12. Close the waste toner unit.



Make sure the bar has engaged.

13. Close the printer's front cover.


6.2. Cleaning the Transport Unit




1. Turn off the SOLID F140 printer and pull the power plug. Make sure, the printer has been switched off for at least 15 minutes before you start cleaning the device.
2. Open the front cover of the printer.
3. Open the waste toner unit (compare previous section).
4. Press down the green lever of the transport unit. The transport path is set down by that.




5. Press down the lever while pulling the transport unit towards you to avoid damaging the printer. Pull the unit until it stops.

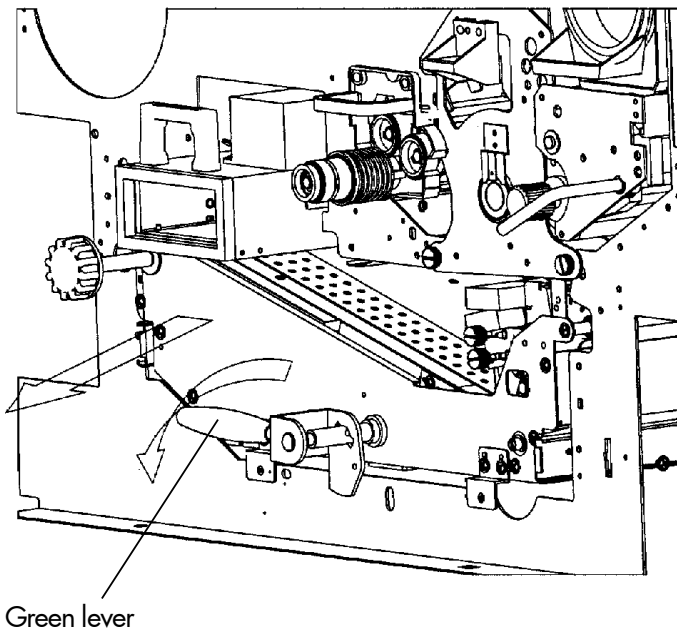

- Using an anti-static service vacuum cleaner, clean up toner, paper dust or other particles which may have accumulated.

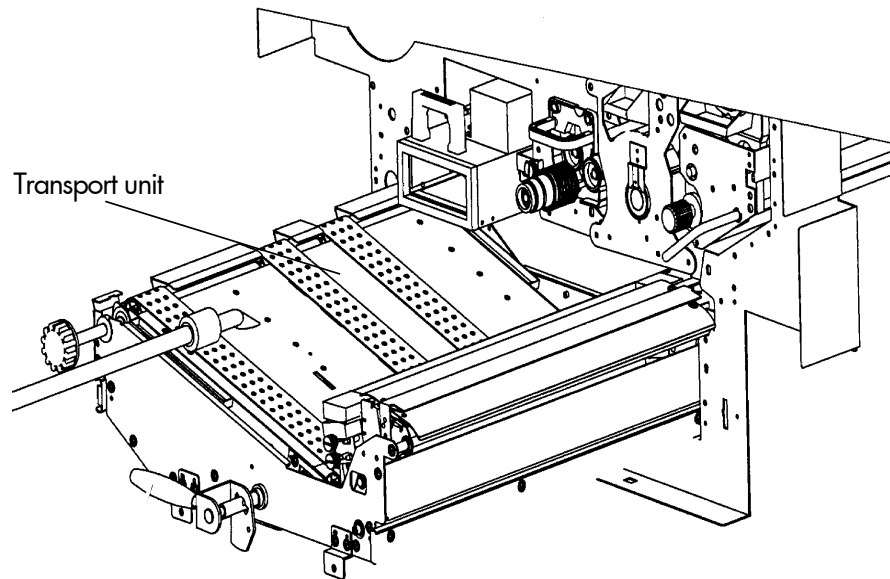


- Wipe off the dirt on the transport surface using a wet paper towel.

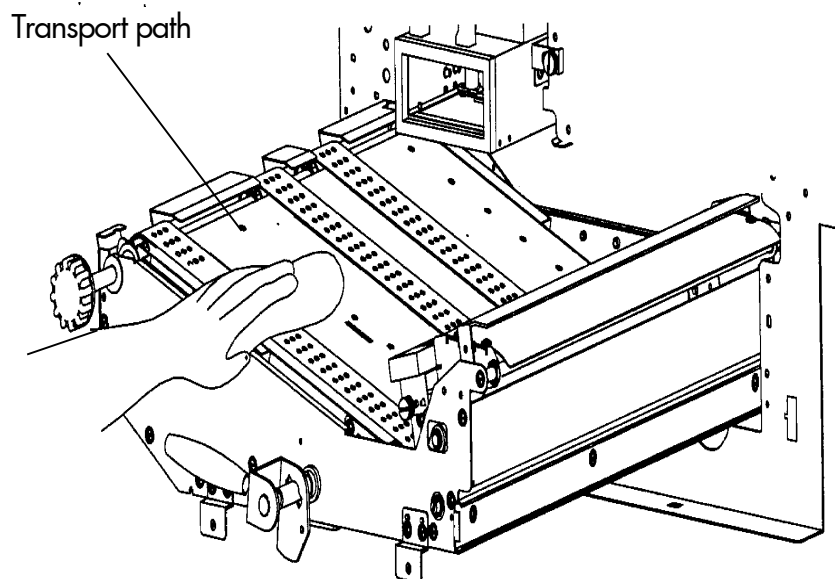

8. Replace the transport unit. The green lever has to be pressed down for this process. Slide the transport unit into the printer until it stops while pressing down the lever (resilience at the end). Tip up the green lever of the transport unit to its "up" position.



Pay attention to the second bar of the transport unit located under the green lever - it also has to click into place (second bar up).

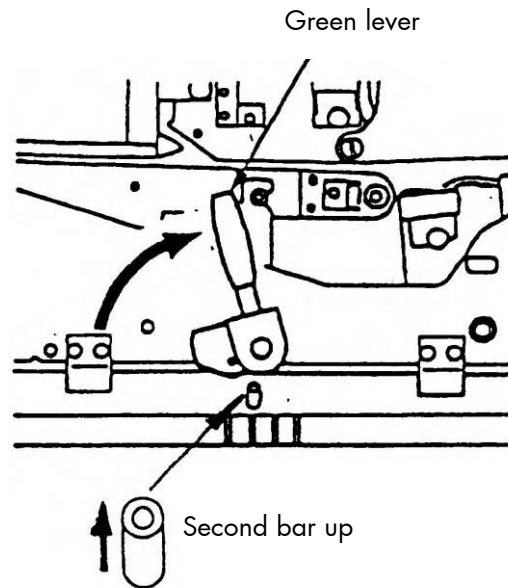

Green lever and second bar up have to be clicked into place to avoid damaging the printer.

9. Close the waste toner recovery unit.




Make sure the bars have engaged.

10. Close the printer's front cover.

6.3. Cleaning the Paper Feed Unit

1. Turn off the SOLID F140 printer and pull the power plug.
2. Remove the paper.
3. Absorb paper dust, sprayed toner etc. from the tractor and the area around it using an anti-static service vacuum cleaner.

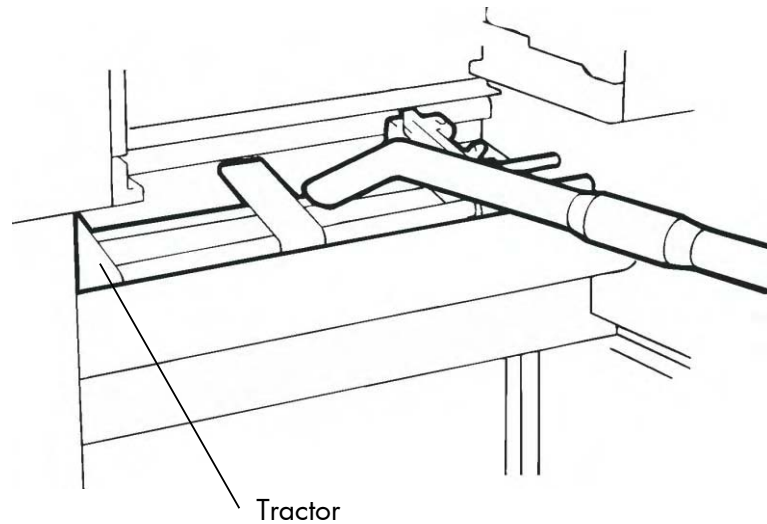


4. Load the paper.

6.4. Cleaning the Paper Near End Sensor



After 300,000 pages A4 have been printed, the Paper Near End Sensor (PNES) and the area around it should be cleaned carefully.

1. Turn off the SOLID F140 printer and pull the power plug.
2. Clean the PNES and the area around using a wet paper towel.

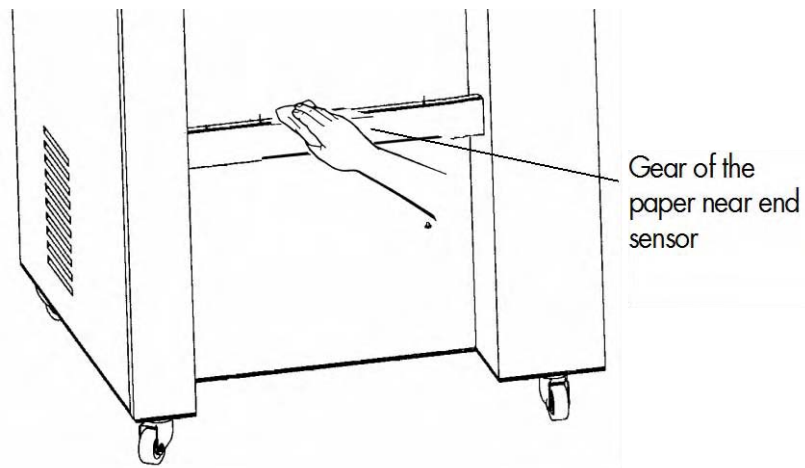

6.5. Cleaning the Power Stacker



After 200,000 pages A4 have been printed, the power stacker and the area around it should be cleaned using a vacuum cleaner.



7. Operator Maintenance

In order to run the printer always on its highest quality level, it is necessary to perform regularly cleaning operations. In addition special components have to be replaced if the occasion arises. These operations can be performed by a Microplex trained operator. A untrained person is not allowed to perform these operations.



The maintenance cycles given in this chapter are valid for printing with a print density of 5 % (if no other values are specified; see also chapter 10 Specifications).

Please note: The printer is provided with a so-called "Page counter". This counter is calibrated to 8.5" (measured in print direction). "Real numbers of pages" in case of printing other formats have to be appropriately converted. (See examples in chapter 6 Printer cleaning.)



Further maintenance operations have to be done by the service engineer (in accordance with the hints given in the Service Manual).

7.1. Charger Cleaning



The operations described in this section have to be performed after the printing of every 50,000 pages A4 (portrait Two-Up).



Turn off the printer and pull the power plug before start working at the chargers.



To clean the chargers the following tools are available: a blower brush, a special wire cleaning tool and a emery block for the cleaning of the main charger's grid.




Please clean the chargers especially careful to avoid loosening or tearing the tightened wires. Improper replacement of the chargers into the printer may damage the photoreceptor drum.

7.1.1. Main Charger Cleaning




Turn off the printer and pull the power plug before start working at the chargers.


1. Open the front cover of the printer.

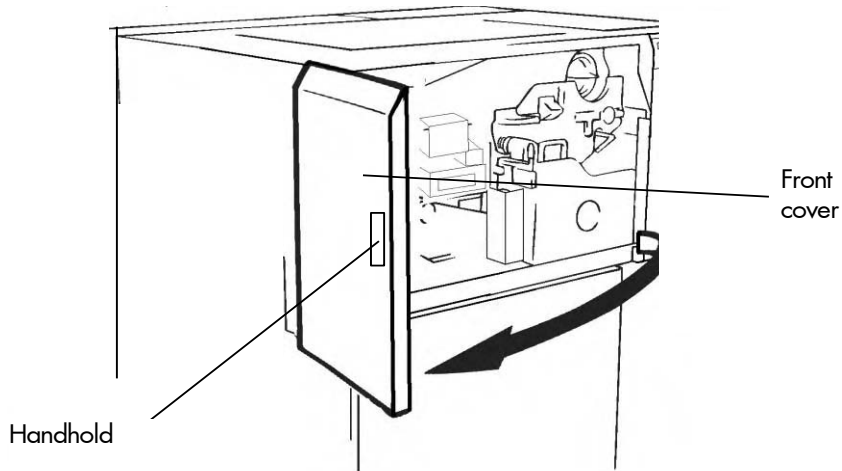

2. Pull out the cleaning rod horizontally and then insert it back several times for cleaning the wire of the main charger.

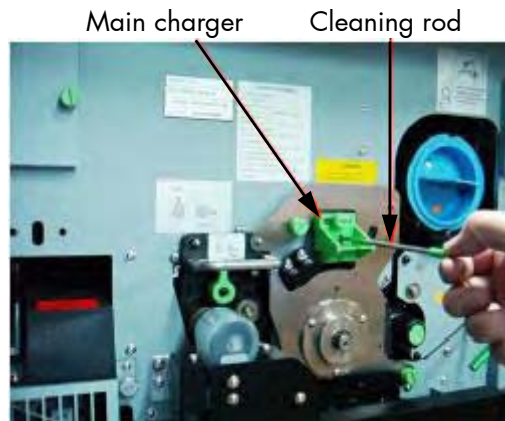


3. Loosen the knurled screw of the main charger and pull out the charger.

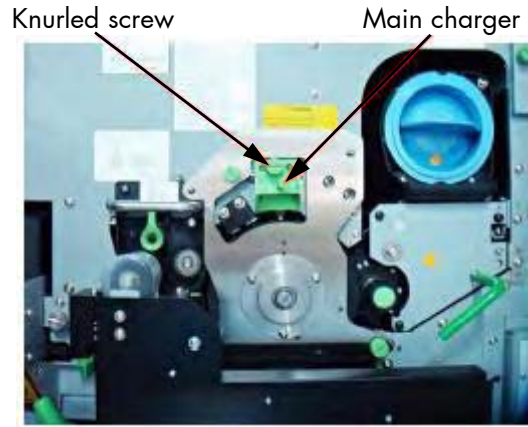

4. Place the charger on a clean and level worktop.
5. Clean the housing of the main charger using the blower brush.




6. Remove the grid from the main charger. For this please push on the tab and remove the grid.

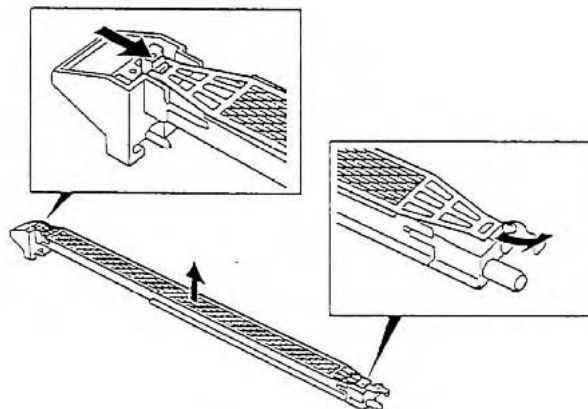


7. Use the wire cleaning tool to clean the charger's wire.
After this process the wire should be completely smooth.



8. Reassemble the grid to the main charger. First you have to mount the grid to the plastic pin.

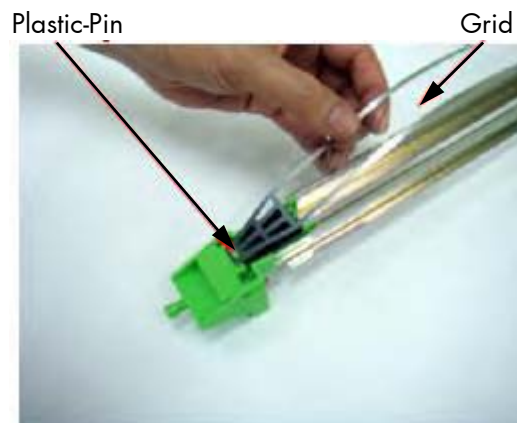

9. Hold the plastic end of the main charger while mounting the free end of the grid to the metal pin.

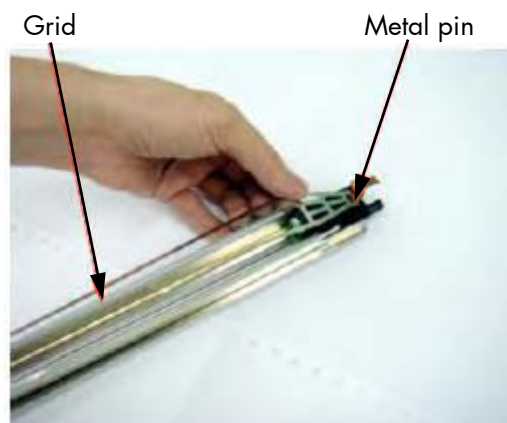


10. Replace the main charger in its original position (compare picture in step 2) and tighten the knurled screw.
11. Close the printer's front cover.

7.1.2. Pre-Charger Cleaning



Turn off the printer and pull the power plug before start working at the chargers.

1. Open the front cover of the printer.
2. Press down the open lever to open the waste toner recovery unit.

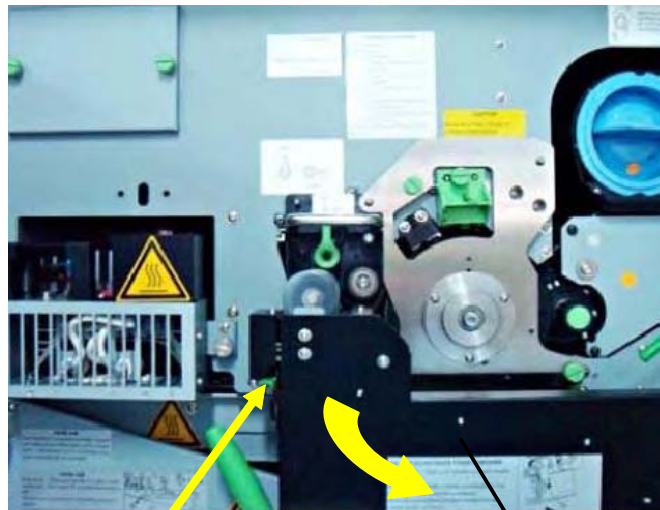

Open lever (green)

Waste toner recovery unit

3. Loosen the knurled screw of the pre-charger and pull out the charger.



Pre-charger

Knurled screw

4. Place the charger onto a clean and level worktop.
5. Using the blower brush, remove paper dust and other unwanted particles.
6. Clean the wire using the wire cleaning tool. After having finished this procedure the wire should be completely smooth.
7. Replace the charger in its original position and fasten the knurled screw to secure the charger.
8. Close the waste toner unit.



Make sure the bar has engaged.


9. Close the printer's front cover.

7.1.3. Transfer-/Separator Charger Cleaning



Turn off the printer and pull the power plug before start working at the chargers.

1. Open the front cover of the printer.
2. Press down the open lever to open the waste toner recovery unit.

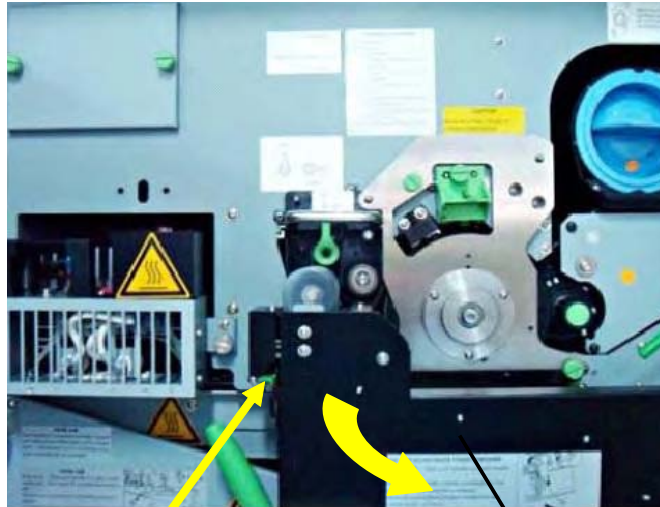

Open lever (green)

Waste toner recovery unit

3. Pull out the cleaning rod horizontally and then insert it back several times for cleaning the wire of this charger.



Transfer-/Separator charger


Cleaning rod



Before performing the next step make sure the transfer-/separator charger is in its "down" position to avoid damaging the photoreceptor drum.

Please go on like this:

- Take a slotted screwdriver and turn the transfer elevator drive shaft (see following figure) clockwise, for example. While doing this, watch the movement of the transfer charger.
- If the charger has moved upwards, please turn the drive shaft backwards now until the charger is in the down position.
- If the charger has moved downwards, continue in turning the drive shaft until the charger is in the deepest position.

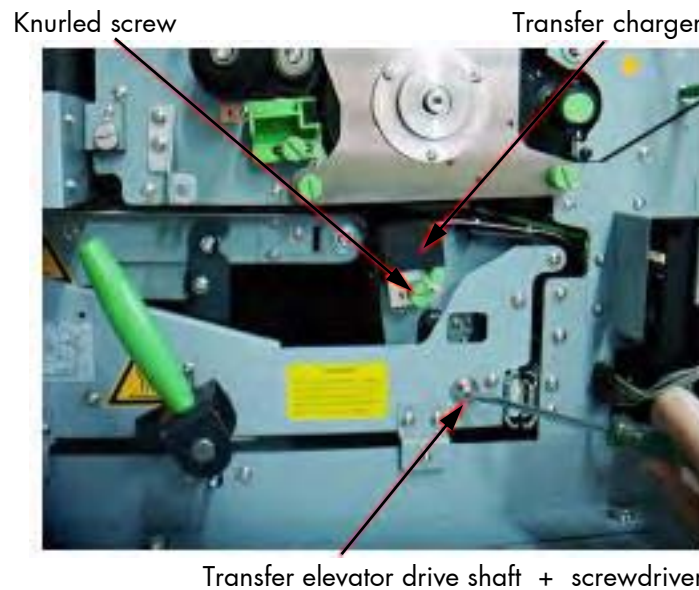

4. Turn to loosen the knurled screw at the transfer-/separator charger and pull the charger out.
5. Place the charger onto a clean and level worktop.
6. Using the blower brush, remove paper dust and other unwanted particles.
7. Then clean the wire using a wire cleaning tool. After having finished this procedure the wire should be completely smooth.

8. Replace the charger in its original position and tighten the knurled screw.

9. Close the waste toner recovery unit.



Make sure the bar has engaged.

10. Close the front cover of the printer.

7.2. Developer Unit Cleaning




Please check the extend of soiling of the developer unit every time the toner cartridge is replaced (see section 3.2).


Cleaning the developer unit has to be done in due time to avoid reduced print quality (see section 8.1, too).




Please clean the developer unit especially careful to avoid damaging the sensors.

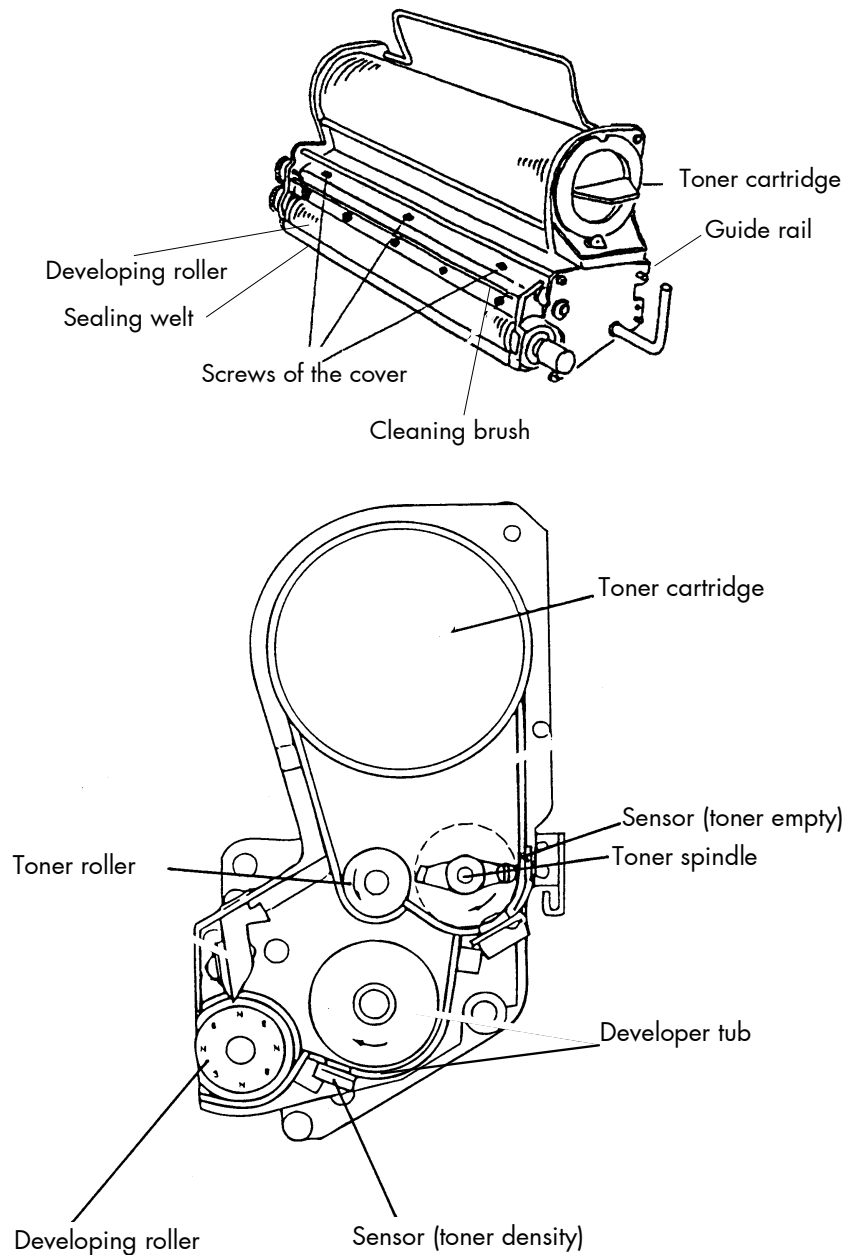

1. Turn off the printer and pull the power plug.
2. Open the front cover of the printer.

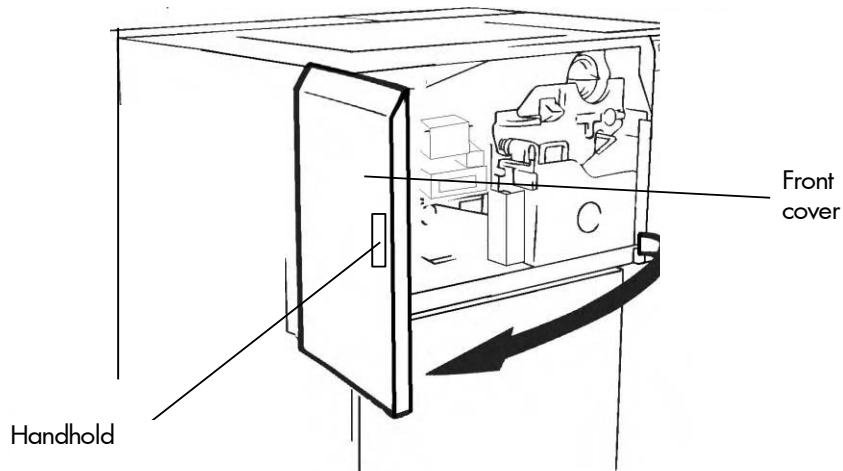


3. Turn the lever of the developer unit clockwise until it points up. The developer unit will be separated from the photo-receptor drum by this operation.

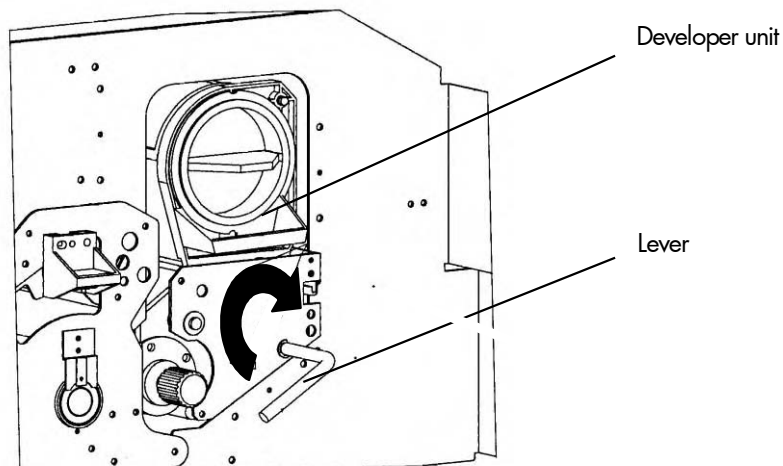

Pay attention to a correct performance of this operation to avoid damaging the photoreceptor drum in the following steps.

4. Push the developing unit lock (see following figure) to the right and hold the lock in this position. Then pull out the developing unit partially using the lever.

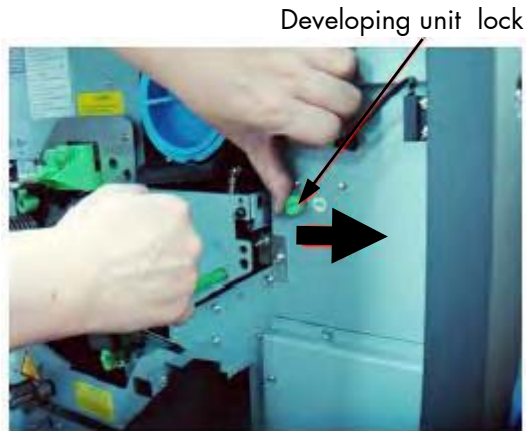

5. Now reach for the handle with your left hand (see following figure) and pull out the developing unit a little more.




6. Push the developing unit lock to the right now (see following figure) and hold the lock in this position. Then completely remove the unit from the printer and place it on a covered, level worktop.



Developing unit lock

7. For developer unit cleaning make a potential compensation (grounding) with the printer cabinet. At the developer unit the grounding has to be connected to the back screw of the cover (see picture below).

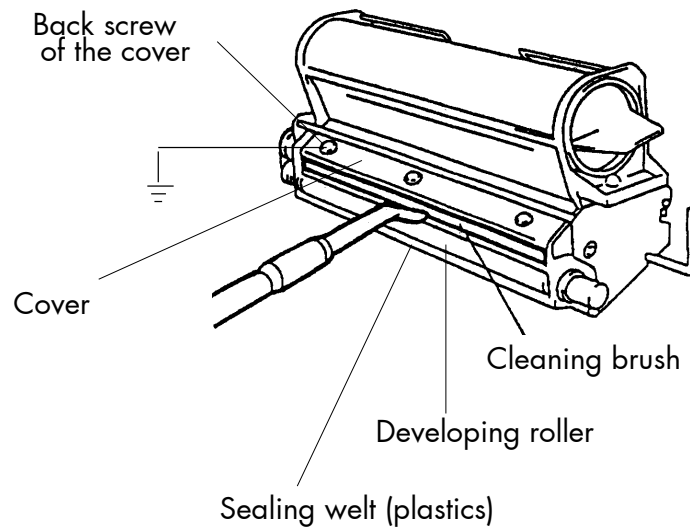

8. Clean carefully the cleaning brush and the sealing welt with an anti-static service vacuum cleaner and remove also the toner from the cover of the developer unit.

9. Remove the potential compensation.
10. Reinstall the developer unit (see the following section).
11. Close the printer's front cover.

7.3. Main Charger Replacing




After having printed every 50,000 pages A4 (portrait Two-Up) the main charger has to be refurbished.
After having printed 424,000 pages A4 (portrait Two-Up) the main charger has to be replaced.



Turn off the printer and pull the power plug before start working at the chargers.

1. Open the front cover of the printer.
2. Turn the knurled screw of the main charger to loosen it and pull the main charger out towards you.

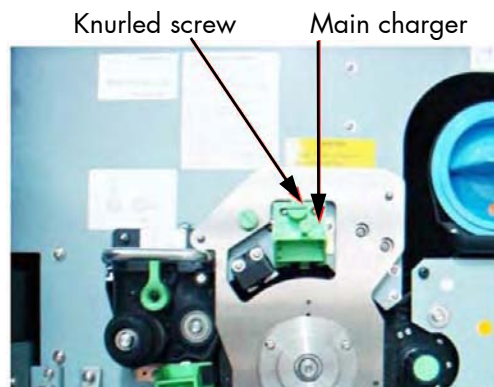

3. Replace the new main charger in its original position and fasten up the knurled screw to secure the charger.
4. Close the printer's front cover.

7.4. Pre-Charger Replacing




After having printed every 50,000 pages A4 (portrait Two-Up) the pre-charger has to be refurbished.

After having printed 636,000 pages A4 (portrait Two-Up) the pre-charger has to be replaced.



Turn off the printer and pull the power plug before start working at the chargers.


1. Open the front cover of the printer.
2. Open the waste toner recovery unit.

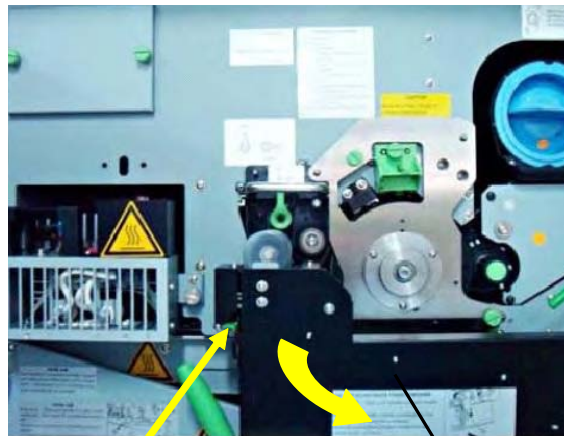

Open lever (green)

Waste toner recovery unit

3. Turn to loosen the green knurled screw of the pre-charger and pull the pre-charger out towards you.

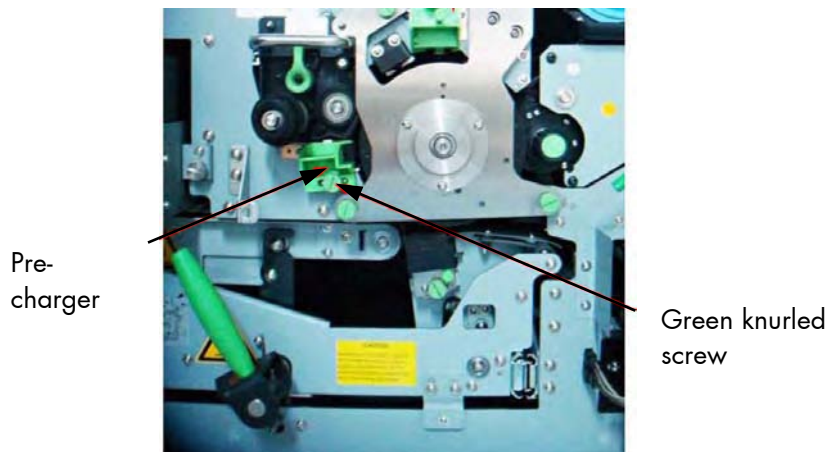

Pre-charger

Green knurled screw

4. Install the new charger in its original position and tighten the screw.

5. Close the waste toner recovery unit.



Make sure the bar has engaged.

6. Close the printer's front cover.

7.5. Transfer-/Separator Charger Replacing




After having printed every 50,000 pages A4 (portrait Two-Up) the transfer-/separator charger has to be refurbished.

After having printed 636,000 pages A4 (portrait Two-Up) the transfer-/separator charger has to be replaced.



Turn off the printer and pull the power plug before start working at the chargers.

1. Open the front cover of the printer.
2. Open the waste toner recovery unit.

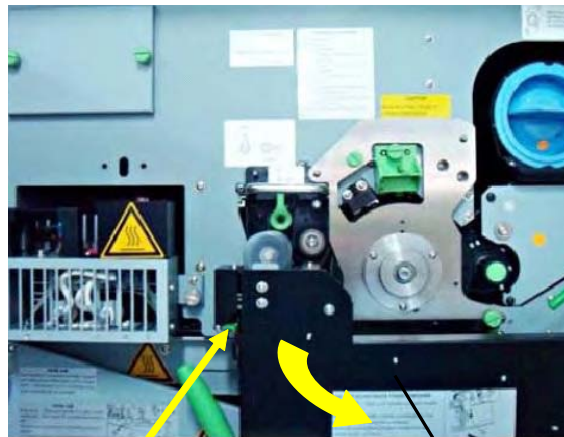

Open lever (green)


Waste toner recovery unit



Before performing the next step make sure the transfer-/separator charger is in its "down" position to avoid damaging the photoreceptor drum.

Please go on like this:

- Take a slotted screwdriver and turn the transfer elevator drive shaft (see following figure) clockwise, for example. While doing this, watch the movement of the transfer charger.
- If the charger has moved upwards, please turn the drive shaft backwards now until the charger is in the down position.
- If the charger has moved downwards, continue in turning the drive shaft until the charger is in the deepest position.

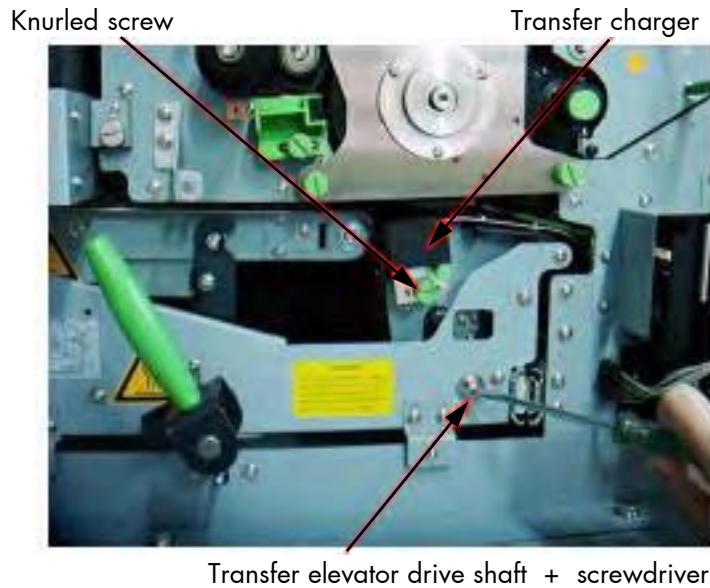

3. Turn to loosen the knurled screw of the transfer-/separator charger and pull the transfer-/separator charger out towards you.
4. Replace the new transfer-/separator charger in its original position and fasten up the knurled screw to secure the charger.
5. Close the waste toner recovery unit.



Make sure the bar has engaged.

6. Close the printer's front cover.


7.6. Photoreceptor Drum Exchange



After having printed a maximum of 424,000 pages A4 (portrait Two-Up) the photoreceptor drum has to be exchanged.



1. Turn off the printer and pull the power plug before start working.
2. Open the front cover of the printer.

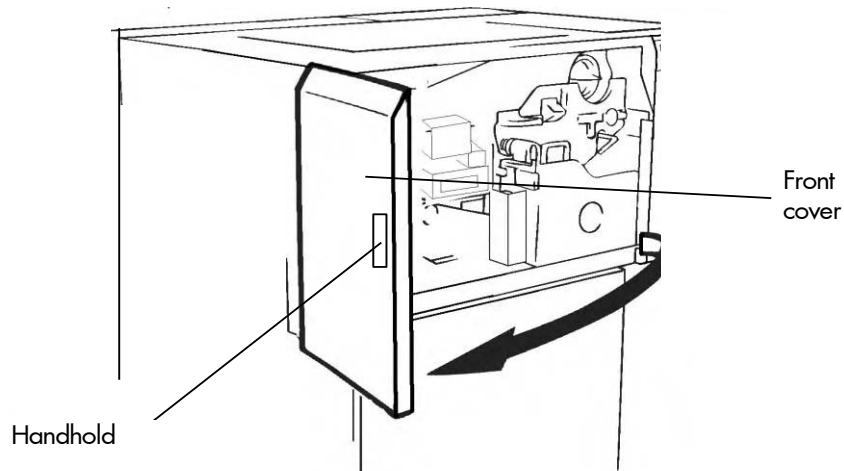

3. Turn the lever of the developer unit clockwise until it points up. The developer unit will be separated from the photoreceptor drum by this operation.




Lever



Pay attention to a correct performance of this operation to avoid damaging the photoreceptor drum in the following steps.


4. Open the waste toner recovery unit.

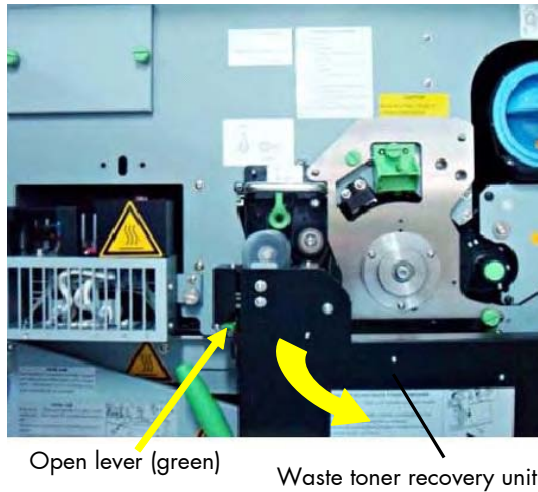


Before performing the next step make sure the transfer-/separator charger is in its "down" position to avoid damaging the photoreceptor drum.

Please go on like this:

- Take a slotted screwdriver and turn the transfer elevator drive shaft (see following figure) clockwise, for example. While doing this, watch the movement of the transfer charger.
- If the charger has moved upwards, please turn the drive shaft backwards now until the charger is in the down position.
- If the charger has moved downwards, continue in turning the drive shaft until the charger is in the deepest position.

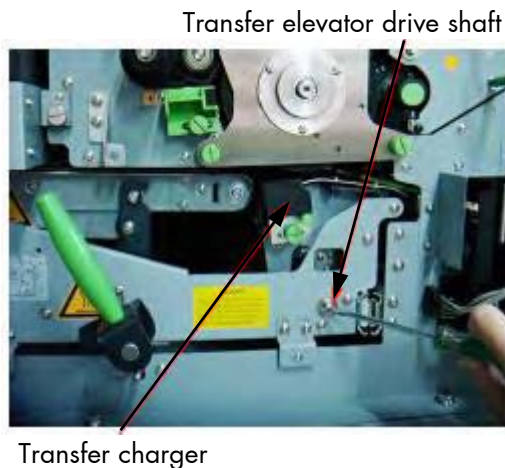

5. Turn the green lock lever of the cleaning unit to the "open" position (the lever has to point to 3 o'clock).

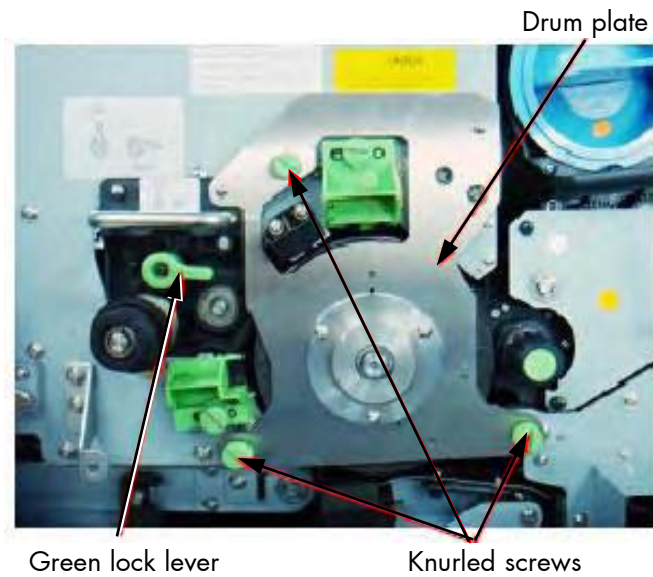


6. Turn to loosen the three knurled screws the drum plate is fixed with (see figure above) and remove the drum plate.


7. Remove the nut from the drum shaft.



During this operation the drum must not rotate!

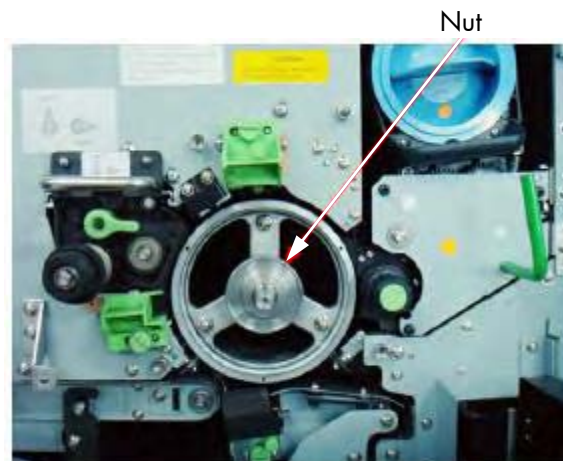

8. Fix the auxiliary rod at the drum shaft.

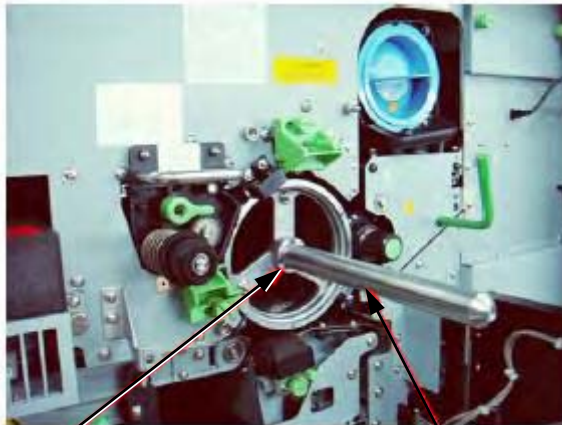

Drum shaft

Auxiliary rod




Do not touch the drum surface because the material is easy to damage.

9. Pull out the old drum carefully along the auxiliary rod.
Hold the drum at its front and rear side and remove it out of the device using both hands.



Drum

10. Check the O-rings attached on the drum support rollers and replace them with new O-rings, if need be. (See next figure.)

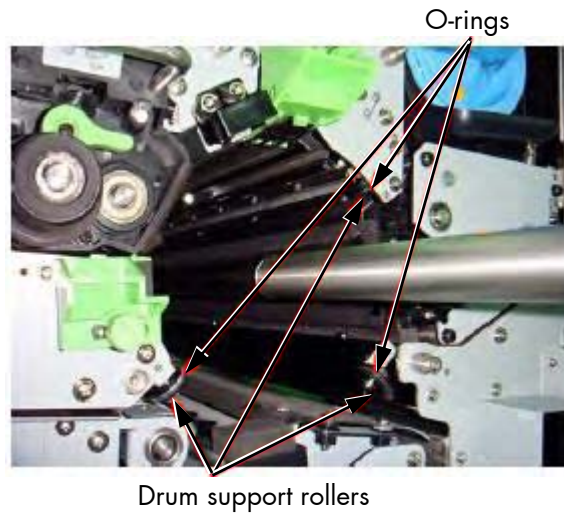

11. Keep the old drum in its original packing until disposal.
12. Clean the drum shaft with a lintfree cloth.
13. Put the new photoreceptor drum out of its packing and clean the end caps of the drum with a lintfree cloth.



Please keep the packing materials for the future disposal of the new drum.



Please avoid exposing the drum to the daylight longer than 5 minutes and don't touch the drum surface.

14. Put the drum carefully with both hands onto the auxiliary rod. When the drum is reaching the position, where the auxiliary rod is fixed at the drum shaft, lift the drum carefully (not by force) over the connection.



Please secure that the drum lies on the Drum support rollers (see figure above) to avoid damage when you move it into the device.



If the position of the drum is not correct, take it out again and look for foreign particles or other stoppages at the shaft.

15. Turn the photoreceptor drum by hand and press it a little bit into the device until it stops at the rear. After that turn the drum clockwise until it engages.




Please be especially careful when carrying out this operation to avoid damaging the printer.

16. Remove the auxiliary rod from the drum shaft.
17. Put the nut to the drum shaft and fix it well.
18. Install the drum plate and tighten the knurled screws.
Please pay attention, that the ball-bearing doesn't cant.



19. After the drum installation please measure the resistance. For that you put the positive circuit of a digital multimeter to the drum edge and the negative circuit to a grounded part of the printer (for example a screwhead belonging to the printer chassis). The normal resistance should be 0 Ω .

20. Turn the lever of the developer unit counterclockwise until it points to the lower left (see following figure).
By this operation the developer unit is no longer separated from the photoreceptor drum.

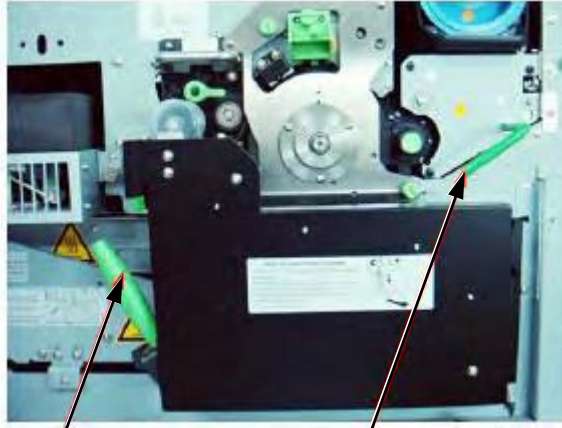

Green lever Lever of the developer unit (here already turned)

21. Take care that the Green lever of the transport unit is in its "up" Position (see figure above).



22. Close the waste toner recovery unit. Make sure the bar has engaged.

23. Close the printer's front cover.

24. Make sure paper is set correctly (see section 3.1, too).

25. Turn the printer on.

During the following warm up time the printer's panel display shows the message "WARM UP".

After a certain time the message [Clean.U.SetIncor.!]
[E0024]

is displayed.

26. Now please open the printer's front cover.

27. Turn the green lock lever of the cleaning unit to the "lock" position (the lever has to point to 12 o'clock; see next figure).



Green lock lever

28. Close the printer's front cover.

29. Press the "ON LINE" key on the printer's control panel to clear the error message.

Now the process of OPC drum initialization is working for a while. After that the printer will switch to the "READY" status.



Disposal of the old OPC drum will be carried out by your service engineer. Until disposal please keep the photoreceptor drum in its original packing.

8. Troubleshooting



When an error occurs, a corresponding error message is displayed in the control panel (see section 8.2).

Please address the problems described in section 8.1 and 8.2 yourself, especially the consumable replacement.



Only a Microplex authorized operator or service engineer should address printer problems for which no remedies are given in the following pages. Such kind of errors will be displayed only by the word "ERROR" and a hex number (e.g. [E001A]).

When reporting a problem to your service engineer, please give him the exact error message. That helps to localize the error more quickly.

If an error message indicates a paper jam, a print repetition will be necessary.



The printer is provided with an automatic jam safety routine to prevent a loss of information.

This automatically jam safety routine can also be switched off, if the user wants to take up the print job at a passage chosen by himself (see section 5.13 Clearing the Input Buffer).

8.1. Reduced Print Quality

The troubles listed below can often be solved by the corresponding hints.
Please inform your service engineer if the troubles occur again after the correction.

| <u>Trouble</u> | <u>Correction</u> |
|--|--|
| The printout is partially uneven. | Clean the wires of the transfer-/separator charger (see section 7.1.3). |
| The printout performance decreases slowly. | Replace the transfer-/separator charger (see section 7.5). |
| The printout has "empty" spots. | Use only dry fanfold paper. |
| The printout shows partially grey stripes. | Clean the wires of the main charger (see section 7.1.1). |
| The printout shows a grey background. | Clean the wires of the pre-charger (see section 7.1.2). |
| There are spots of toner on the printout. | The Pre-charger is dirty: - Clean the pre-charger (see section 7.1.2). Developer unit dirty: - Clean the developer unit (see section 7.2). Replace the toner cartridge (see section 3.2) |

Hint: Fanfold material cannot be printed in the area of the sprocket holes, even in the distance up to 5mm around the sprocket holes a reduced print quality has to be expected.

8.2. Error Messages

In the following the individual error messages that may appear on the display are shown in the following systematic manner:

| | | |
|---------------------------|----------|---|
| [Error message |] | Short description |
| [Error code |] | Remedy |
| [Cover Open! |] | The front cover has not been closed completely. |
| [E0001 |] | Please close it completely. |
| [Load Paper! |] | The printer has no paper. |
| [E0002 |] | Please load paper. Check whether paper is set correctly or not (see section 3.1). |
| [Jam at Fuser! |] | Paper jam in the fusing section. |
| [E0003 |] | Remove the jammed paper (see section 8.3). |
| [Jam after Fuser! |] | Paper jam behind the fusing section. |
| [E0004 |] | Remove the jammed paper (see section 8.3). |
| [Jam at Output! |] | Paper jam in the exit unit. |
| [E0005 |] | Remove the jammed paper (see sections 8.3). |
| [NoPap.at Tractor! |] | There is no more fanfold paper on the tractor. |
| [E0006 |] | Check whether paper is set correctly or not (compare section 3.1). |
| [Scuff Lev. open! |] | Knob "B" (scuff roller) is free. |
| [E0007 |] | Turn knob "B" counterclockwise to lock (see section 8.3.2). |
| [Transp.PathOpen! |] | The paper path is open. |
| [E0008 |] | Use the green lever to close the paper path (compare section 8.3.2). |
| [Paper at Output! |] | There is still paper within the output section. |
| [E000E |] | Remove the paper (see section 8.3). |
| [Tract.Guide Open! |] | Check the tractor unit. |
| [E000F |] | Close the tractor guides. |

| <u>Error code</u> | <u>Description</u> |
|-------------------------------------|---|
| [Pap.at Sep.Sec! E0011 |]] There is still paper within the separator unit. Remove the paper (see section 8.3). |
| [Paper at Fuser! E0012 |]] There is still paper within the fuser unit. Remove the paper (see section 8.3). |
| [Paper at Output! E0013 |]] There is still paper within the exit unit. Remove the paper (see section 8.3). |
| [Abnorm.PaperPos.! E0016 |]] Paper jam within the feeding unit. Remove the jammed paper (see section 8.3) and press the key SPLIT. |
| [No Clean. Unit! E0026 |]] The cleaning unit is missing. Install the cleaning unit. |
| [WasteTon.BoxFull! E0028 |]] The waste toner bottle is full. Replace the bottle with a new one (see section 3.3). |
| [No Waste Ton.Box! E0029 |]] There is no waste toner bottle within the unit. Insert a waste toner bottle (see section 3.3). |
| [No Toner! E002A |]] There is no more toner within the cartridge. Insert a new toner cartridge (see section 3.2). |
| [Toner Low E002D |]] The message [Toner Low] is only a warning that the printer will run out of toner soon. Replace the toner cartridge as soon as the message [No Toner] is displayed (see section 3.2). |
| [Rear Cover Open! E0033 |]] The rear cover has not been closed completely. Please close it completely. |

Error code

Description

Hint:

[E005 at the beginning of the error code indicates **stacker error messages:**

| | |
|---|--|
| <p>[Stacking Fail! [E0055</p> | <p>]] Fanfold paper is not folded correctly.] Check whether paper is set correctly or not.</p> |
| <p>[Stacker Full! [E0056</p> | <p>]] The power stacker is full.] Please remove the paper.</p> |
| <p>[Stacker Not Rdy! [E0057</p> | <p>]] Stacker is not ready]</p> |
| <p>[Stack.Limit Err.! [E0059</p> | <p>]] Stacker capacity is exceeded.] Please remove the paper.</p> |

More error messages are listed in section 8.2.1.



If the remedies above are not successful, please call a Microplex authorized service engineer.

When reporting a problem to your service engineer, please give him the precise error message. That helps to localize the error more quickly.

8.2.1. Further Error Messages and Error Codes

The following printer errors will be displayed in the panel by a hex number and a shortened error messages (or the word "ERROR"). Only a Microplex authorized operator or service engineer should address the printer problems listed in the following table. (Exception: some errors, which are listed in the superior section 8.2, too.)

| <u>Error code</u> | <u>Description</u> |
|---------------------------------------|---|
| [Cut Fail.Front! [E000A |] Cut motor does not work normally (at the front)] |
| [Cut Fail. Rear! [E000B |] Cut motor does not work normally (at the rear)] |
| [Elev.M.Err.Front! [E000C |] Transport motor does not work normally (no up position)] |
| [Elev.M.Err.Rear! [E000D |] Transport motor does not work normally (no down position)] |
| [Paper at Fuser! [E0012 |] Paper does not leave the fuser unit (compare section 8.2 and 8.3).] |
| [Paper at Output! [E0013 |] Paper does not leave the paper exit (comp. section 8.2 and 8.3)] |
| [Abnorm.PaperPos.!! [E0016 |] Position of fanfold paper is not normal] |
| [High Volt.Fail.!! [E0017 |] High voltage providing is not normal] |
| [Drum Motor Fail.!! [E0018 |] Drum motor does not work normally] |
| [Surf.Pot.tooHigh! [E0019 |] Surface potential is not normal (too high)] |
| [Surf.Pot.tooLow! [E001A |] Surface potential is not normal (too low)] |


| <u>Error code</u> | <u>Description</u> |
|---------------------------------------|--|
| [No Pre Charger! [E001B | Pre charger is missing |
| [Flash Failure! [E001F | Flash is missing |
| [Fuser Overheat! [E0020 | Fuser unit is too hot |
| [Dev.Motor Fail! [E0022 | Developer motor does not work normally |
| [Dev.UnitSetIncor.! [E0023 | Developer unit setting is not correct |
| [Clean.U.SetIncor.! [E0024 | Cleaning unit setting is not correct |
| [No Clean. Unit! [E0026 | Cleaning unit is missing |
| [WasteTon.BoxFull! [E0028 | Waste toner bottle is full |
| [No Waste Ton.Box! [E0029 | Waste toner bottle is missing |
| [No Toner! [E002A | No toner |
| [Toner Low [E002D | Toner density is not normal (too low) |
| [LED Array Overh.! [E0032 | LED head is too hot |

| <u>Error code</u> | <u>Description</u> |
|--------------------------------------|--|
| [Stack.Com.Err.OR! E0050 |] Communication error at the power stacker (overrun error) |
| [Stack.Com.Err.PE! E0051 |] Communication error at the power stacker (parity error) |
| [Stack.Com.Err.FE! E0052 |] Communication error at the power stacker (framing error) |
| [Stack.Com.Err.CE! E0053 |] Communication error at the power stacker |
| [Stack. Interlock! E0054 |] Error at the locking device of the power stacker |
| [Stacking Fail.! E0055 |] Fanfold paper is not folded |
| [Stacker Full! E0056 |] Stacker is full |
| [Stacker Not Rdy! E0057 |] Stacker is not ready |
| [Stack.NoAutoMode! E0058 |] No auto mode |
| [Stack.Limit Err.! E0059 |] Stacker capacity is exceeded |
| [Stacker.Mot.Error! E005A |] Motor rotation is not normal |
| [Stacker Busy! E005B |] Power stacker is active |
| [Stack.LowestPos.! E005C |] Error at the stacker |
| [Stack.Com.T.Out! E005D |] Communication error (timeout) |

8.3. Paper Jam

8.3.1. Paper Jam inside the Tractor

1. Open the paper retaining levers.

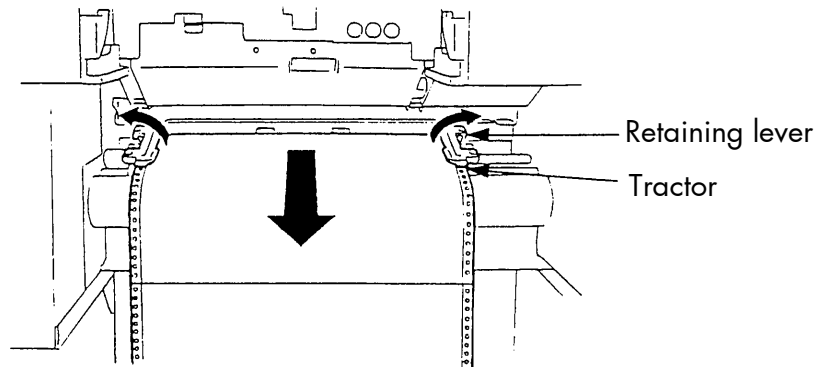

2. Remove the jammed paper. Detach the creased paper at the perforation.
3. Pull the paper out of the device only in the transport direction.
4. Insert the paper again (see section 3.1).




Please do not push the paper beyond the tractor into the device to avoid reaching the Paper Jam Sensor.

8.3.2. Paper Jam inside the Print System




The components of the fuser unit and the transport unit can get hot. Please wait until they have cooled down.


1. Open the front cover of the printer.
For this procedure the paper transport should be finished for at least 15 seconds.

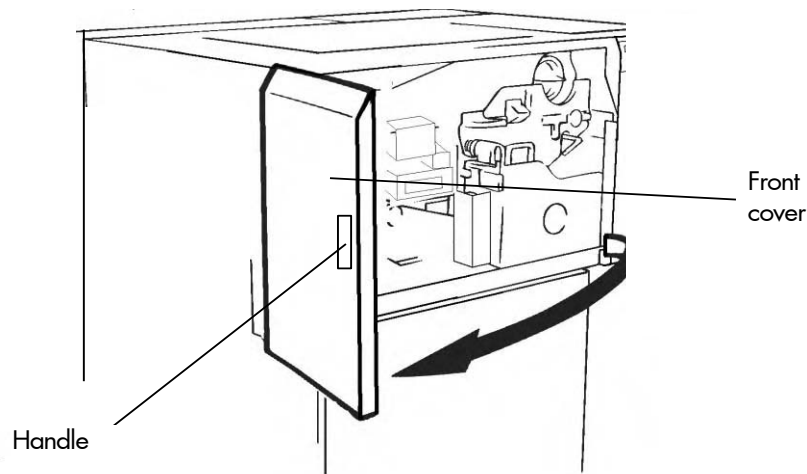


2. Press down the open lever of the waste toner recovery unit and open the unit.

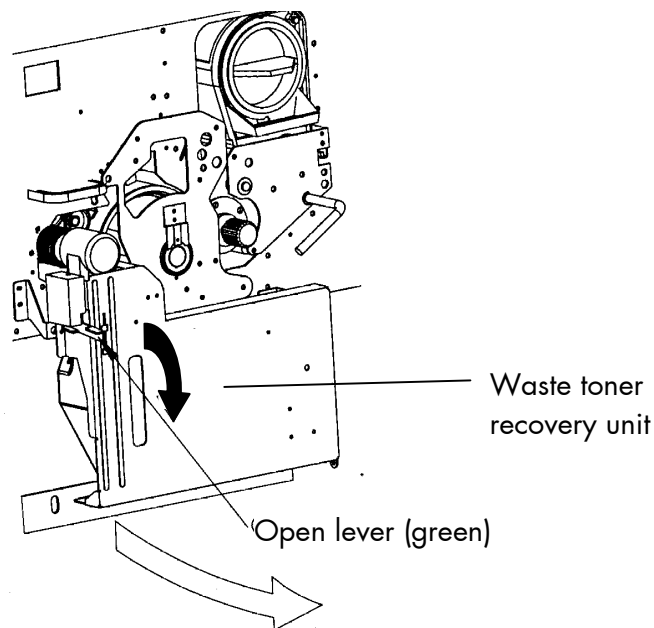


3. Turn the green lever at the transport unit counterclockwise downwards. The transport path will be shifted down. Do not pull out the transport unit.

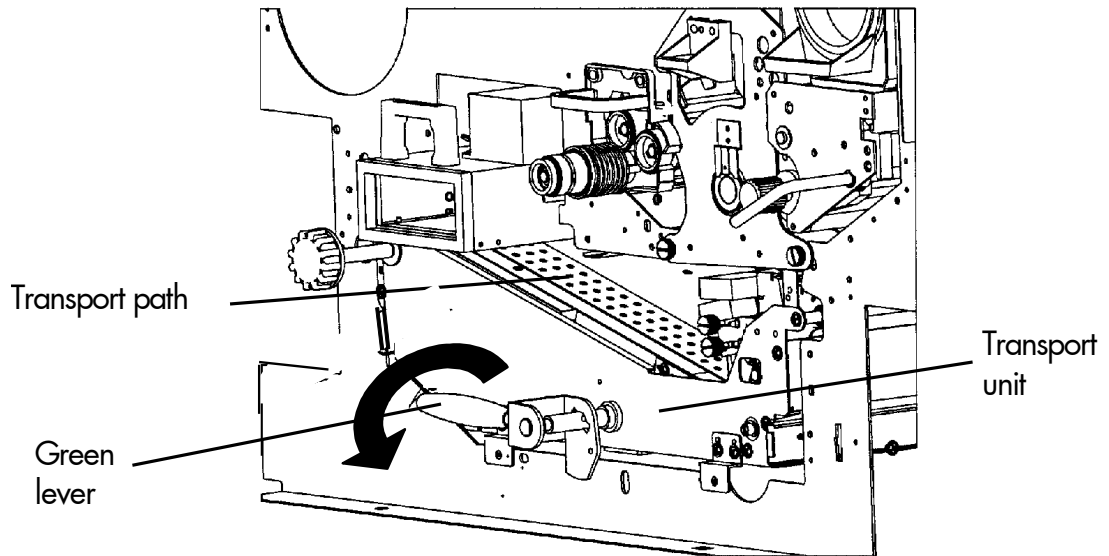


4. Look for jammed paper in the transport unit.
5. Rotate the turning knob "B" 90° clockwise (free) to set the scuff roller to the "open" condition.

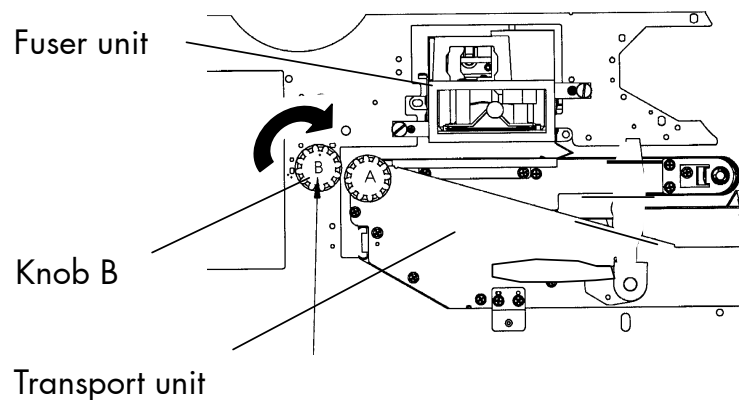

6. Detach the fanfold paper within the feeding unit at the perforation and open the paper retaining levers to remove the jammed paper.
Pull the paper out of the device only in the transport direction.

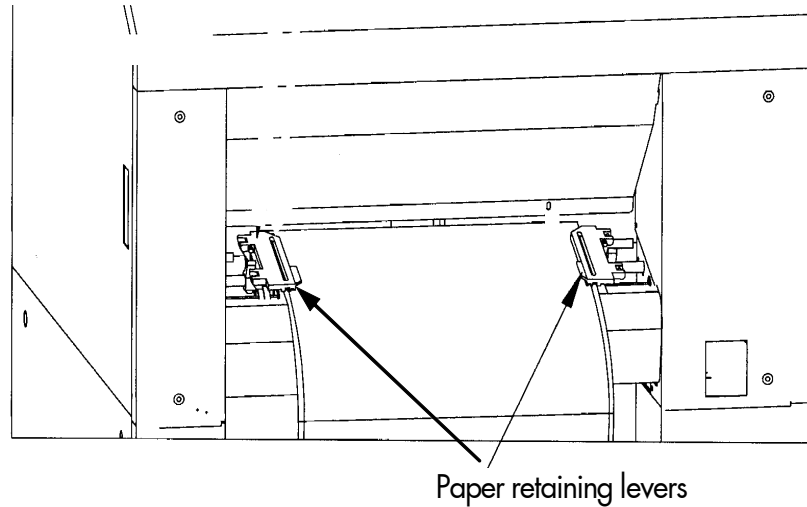


7. Detach the fanfold paper in the exit unit section at its perforation. Remove the jammed paper by pulling it out. Pull the paper out of the device only in the transport direction.

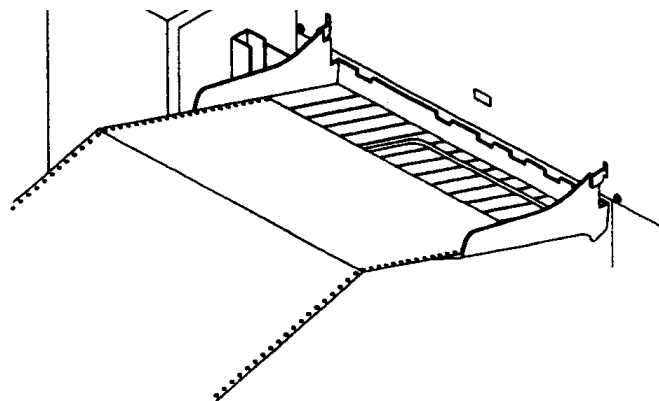

8. After having removed the jammed paper:

- Turn knob "B" 90° counterclockwise back to his original position (Lock).
- Press down the green lever to slide the transport unit into the printer until it stops while pressing down the lever (resilience at the end).
- Tip up the green lever of the transport unit to its "up" position.

Pay attention to the second bar of the transport unit located under the green lever - it also has to click into place (second bar up).

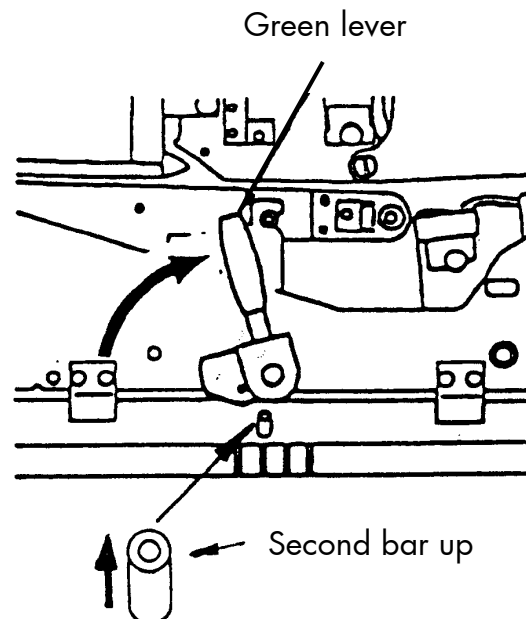



Both locks of the transport unit have to be engaged to avoid damaging the printer.

9. Close the waste toner recovery unit.



Make sure the bars have engaged.

10. Close the printer's front cover.

11. Load new fanfold paper (see section 3.1).

8.3.3. Paper Jam within the Power Stacker

There are different kind of troubles possible within the power stacker (see section 8.2.1: Further Error Messages and Error Codes, too). Frequently the folding of the paper has not worked right and so a paper jam might result.

Press the table down switch to lower the paper table. Then shift the paper table up to remove the flaw.

Sometimes it is also necessary to remove the paper from the stacker or refinish the folding at the perforation and file the paper by hand.

This error described above is displayed by the message

```
[Stacking Fail!   ]
[E0055           ]
```



To avoid paper jams the first folded edge of the fanfold paper (Perforation) has to point away from the printer. (If need be, please tear off the first page of your fanfold paper to allow the alignment shown in the following figure.) In addition do not stretch the paper excessively and do not allow any slack to avoid incorrect filing.

By this you can secure that the paper will be positioned right in the stacker.

Preview: Fanfold paper loaded in the right way



Please inform your service engineer if there are any troubles different from the one above.

8.4. Print Repetition after an Error

The printer is provided with an automatic jam safety function to prevent a loss of data.

When an error occurs, all the pages on the paper path will be printed again. This ensures that no data will get lost.

The exact number of pages to repeat depends on the format length and the position where the error occurred on the page.

This automatic jam safety function can be switched off (by changing the EEPROM - configuration) if the user wants to resume the print job at a position he chooses himself.

In addition to this see panel function Clearing the Input Buffer (section 5.13).

9. Measures for Transport and Shipping (Repacking)

The Printer is shipped with special packing material and fixing measures. It is recommended to store the boxes and those packing materials.



In case of further shipping or returning of the products they must be repacked in the original way in order to avoid damaging during transportation.

The following list gives you an overview of the working steps necessary for repacking. Pay attention to the notices located on the products and the hints given in the Service Manual as well.



If you are not familiar with any of the working steps please ask your service engineer or your supplier.

- Remove the printer's optional devices (for example: stacker ...).
- Remove the Waste Toner Bottle from the printer and seal it.
- Remove the Developer Unit.
Close carefully the toner input and output holes (using paper stripes sealed with adhesive tape, e.g.).
Put the Developer Unit into its original box.
- Remove the Drum from the printer and pack it lightproof into its original box.
- Lock all moveable parts of the printer (use all original transport safety devices, adhesive fasteners and so on).

Repack all items in their original packing material and ship them in the original boxes.

10. Specifications

| | |
|---|---|
| Print technology: | non-impact/electrophotographic, LED, OPC, Xenon-lamp flash fusing |
| Print speed: | up to 140 pages per minute (A4 portrait Two-Up) |
| Resolution: | 300 dpi /600 dpi (in each case dots per inch horizontal and vertical) |
| Paper weight: | 60 - 204 g/m ² |
| Paper size: | Width: 6 to 18 inches (appr.152 to 457 mm), 17 inches printable *) Length: 7 to 24 inches (appr.178 to 610 mm) 7 to 14 inches (using the stacker) |
| Stacker: | 3000 sheets (64 g/m ² ; 8 to 14 inches) inside the stacker |
| Interfaces: | parallel: IEEE 1284 (Centronics), (MP-BUS, SPS-Control, optional) serial: USB 2.0 LAN: Ethernet 10/100 Mbit (TCP-IP) Optional: LAN: Ethernet (SPX-IPX, LAT), Token Ring Host: IBM SCS / IPDS (Twinax/Coax), Siemens (BAM/SS-97) |
| Size: | 780mm (W) x 1360mm (H) x 890mm (D); incl. stacker 1520mm (D) |
| Weight: | appr. 275 kg (including the stacker) |
| Environment: | Temperature: +15°C to +30°C (59°F to 86°F) (operating) -10°C to +35°C (14°F to 95°F) (non operating) Rel. atmospheric humidity: 30% to 80 % (operating) 10% to 80 % (non operating) |
| Mains connection: | 230 V +/- 10% AC, 50 Hz Europe, United Kingdom e.g. |
| Power admission: | max. appr. 4.0 kVA (max. 0.6 kVA standby) |
| maximum permissible system impedance Z_{\max} : | appr. 0.02 Ohm |

*) Hint: Fanfold material cannot be printed in the area of the sprocket holes, even in the distance up to 5mm around the sprocket holes a reduced print quality has to be expected.

Costs per Page for Microplex Print Systems

The term "costs per page" is the most frequently used one in connection with the purchase of a printer. Nevertheless this term is the one with the biggest lack of definition.

The distributors normally attach great importance to having small values for the costs per page. The user normally wants to have a value that is as realistic as possible.

There isn't any generally valid rule to calculate the costs per page. Therefore values given by different manufacturers are very often not comparable.

The values given by Microplex are based on the utilization time of the so-called consumables of the printer. There isn't any generally valid rule for this calculation, either. Therefore Microplex has fixed the definition of consumables as follows:

1. Consumables

Consumables are parts or substances which the user can exchange or refill without tools.

Microplex understands by this definition that the user can decide by visible criteria when he should exchange or refill consumables. The working steps can be done by the user in accordance with the manual without the usage of tools.

Consumables can be different depending on the printer type. The most important consumable for example is **toner**.

Usually the utilization time of these materials is given as a number of pages (DIN A4). These values often refer to the print density (3%, 4%, or 5%) which is given as an application specific parameter.

Usually a value of 5% print density is defined, very seldom is 4% used.

In the case of a low print density (e.g. 3%) the utilization time increases, in the case of a high print density (e.g. 10%) the utilization time is decreased.

Therefore the utilization time is strongly dependant upon the application.

Experience proves that in professional applications a print density of higher than 5% is usually reached. For a delivery note containing a form and some bar codes a print density of 8 - 10% is quite normal.

There are further parts that must be exchanged in addition to the consumables during the life time of a print system. Microplex divides these additional parts into two categories:

2. Application specific wearing materials

Application specific wearing materials are parts which have to be exchanged by a service engineer or a trained operator. The criterias for the exchange aren't always easily recognizable for a user. Some of the criterias require measuring techniques or the experience of a service engineer or operator.

In a normal application, parts of this category are:

- fuser unit
- process unit (drum, OPC)
- ozone filter

3. Spare parts

Spare parts are exchanged by the service engineer, when they fail.

Examples for spare parts are:

- couplings
- electronic assemblies
- rollers

Depending on the application some parts may change categories under certain circumstances. If for example very rough paper is used, the rollers can become an (application specific) wearing part.

It's a fact, that the right time to exchange a component depends not only on the failure of a component but also on a possible loss of print quality in the printouts.

MNPSQ = Mean Number of Prints with Specified Quality (**SQ**).


This value is often associated with "Lifetime". This term is not correct. MNPSQ describes the period of time in which a defined print quality is maintained.

The print quality is determined by the values for

- print density
- background darkness
- homogeneity

The value **IQ** (Initial Quality) is used to designate the print quality that is reached with a new printer.

CAQ (Customer Acceptable Quality) is a purely subjective lower limit which a respective customer is willing to accept the print quality. An exchange of parts is only then necessary even if the MNPSQ is already exceeded.

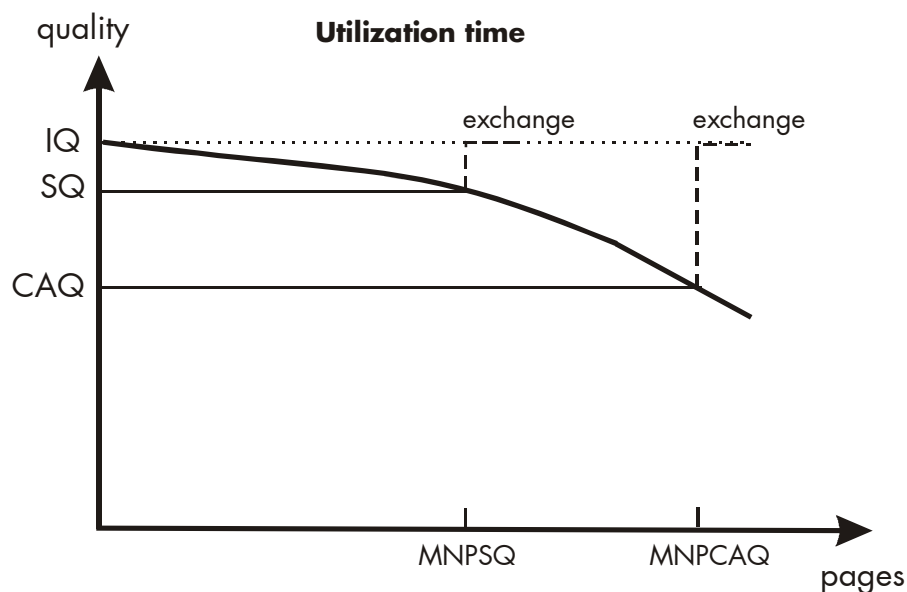

11. Index

A

auxiliary rod 124

B

background, grey 130

bar 96

basics 8

blower brush 102, 107

buffer 65

C

cancel job 65

cartridge 27

CE - conformity 10

CEE plug 15

character spacing 83

characters per inch 83

check list 13

cleaning 89, 101

cleaning unit 18

configuration 52

configuration via control panel 40

connect, printer to a PC 35

consumables 19, 148

contents, table of 3

continuous paper 19

control panel 16, 35

control panel elements 37

control panel functions 54

control panel keys 38

controller 7

conventions 9

costs per page 148

COVER OPEN! 131

D

Data - LED 37

data interface 67

density 84

detergent 89

developer 13

developer unit 13, 18, 111

diagrams 46

display 37

display language 48

disposal 30, 33, 127

DOWN key 43

drum shaft 123

drum surface 124

E

emergency power-off 12

emulations 68

environment 147

environmental conditions 15

ERROR 129

ERROR - LED 37

error codes 134

error messages 131

extended menu 42

external view 16

F

factory default 72
fanfold paper 22, 147
feeding unit 140
first installation 13
flash fusing 7, 147
font bank 53
Font List 59
fonts 52, 61, 73
FORM FEED 64
FORM FEED key 38
FORM LENGTH key 38
format width 51
front cover 16, 90
function keys 39
functions 44
fuser unit 18
fusing 147

H

hexdump 63
humidity, relative atmospheric 15, 147

I

IDOL 13, 70
image shifting 78, 80
input buffer 65, 71
installation 13
interface, connection 15
interfaces 17, 67, 147
Interior view 18
IP address 85

K

key sequence 46
keys 9, 36
knob, turning 139, 141

L

LED announcements 37
lever 94, 96
light emitting diode 9
LINE FEED key 38
line spacing 82
lines per inch 82
Load Paper 50

M

main charger 102, 116
mains connection 147
margin 62
measures, transport 145
memory 65
memory distribution 71
MENU key 39, 44, 45
menu page 54
menu structure 42, 54

N

network parameters 85
normal print mode 64

O

ON /OFF LINE switching 41
ON LINE key 38, 43, 45
operation 35, 41
operator maintenance 101

P

packing materials 13
page description language 70
page format 55
page length 49
panel display 41, 46
panel functions 47
panel keys 36, 43
panel view 36
PAPER END! 131
paper feed 16
paper feed unit 97
paper jam 137, 138
PAPER JAM! 131
paper loading 19
paper near end sensor 23, 98
paper request 50
paper sensor 25
paper size 147
paper weight 147
paper width 51
permanent configuration changes 40, 44
photoreceptor drum 13, 121, 124
power admission 147
power input 15
power on 35, 41
power stacker 99, 143
power standards 15
power switch 16
pre-charger 106, 117
print density 149
print direction 66
print pages per page format 55
print quality 130, 149
print repeat 144
print resolution 60

print speed 7, 147
print technology 7, 147
print width 51
printable width 7
printer components 16
printer installation 14
printing basics 8

R

READY - LED 37
reduced menu 42
repacking 145
resistance, measurement 126
resolution 7, 60, 147
returning 145

S

safety instructions 11
SAVE key 43, 44
sealing welt 114
shipping 145
size 147
sliding pattern 57
spare parts 149
specifications 147
SPLIT key 38
spots of toner 130
stacker 13, 147
status sheet 52
stripes, grey 130
symbol 9
symbol code 77
syntax 46

T

temperature 15, 147
temporary configuration changes 40
TEST key 39
test prints 57
text margins 62
text orientation 76
toner 13
toner cartridge 18, 27
TONER EMPTY! 27, 132
TONER WASTE! 132
tractor 16, 20, 26
tractor cover plates 21
transfer elevator drive shaft 108, 119, 122
transfer-/separator charger 108, 119
transparent code 70
transport 145
transport damages 13
transport unit 18, 94
troubles 130
troubleshooting 129
two-up mode 55

U

UP key 43
utilization time 148

W

waste toner recovery unit 18
weight 147
wire cleaning tool 104, 107, 109

